
## URBAN SCREEN PLANTER SQUARE

USPS 118cm [H] x 40cm [W] x 40cm [D] 242110A003MMBZ10C1

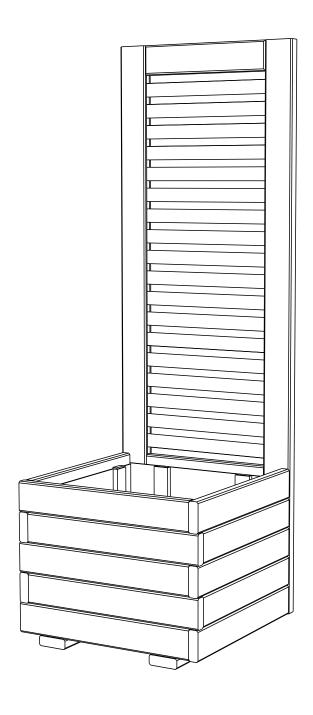



## **BEFORE YOU START**


Check the pack/s and make sure that you have all of the parts listed below.


If not, contact your retailer who will be able to help you.


When you are ready to start make sure you have the right tools to hand, plenty of space with a clean and dry area for assembly.

It is advisable for two people to carry out the work.

Where the wood is screwed we advise to pre-drill the holes (the diameter of the holes should be 2mm smaller than the diameter of the used screw)

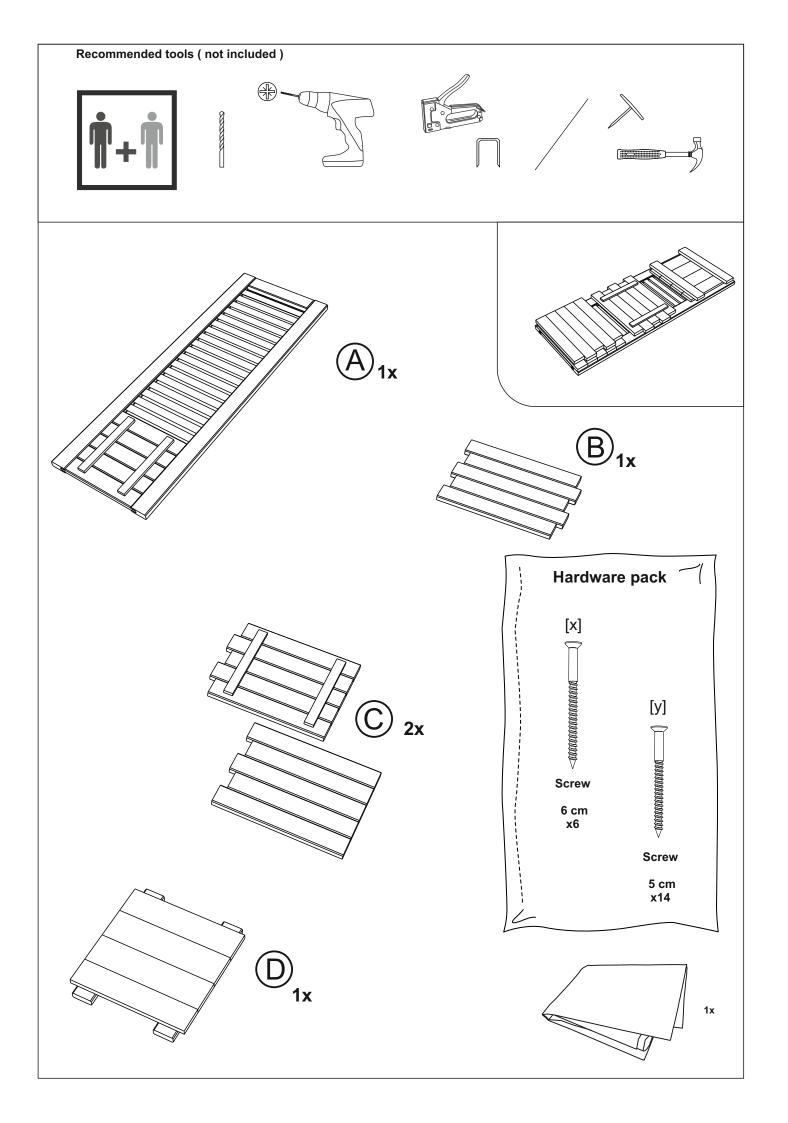

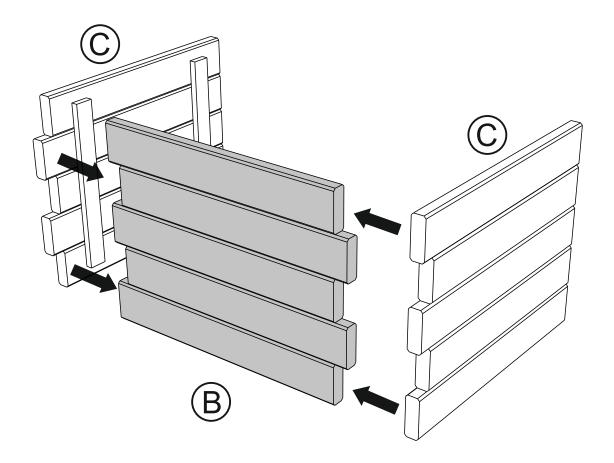

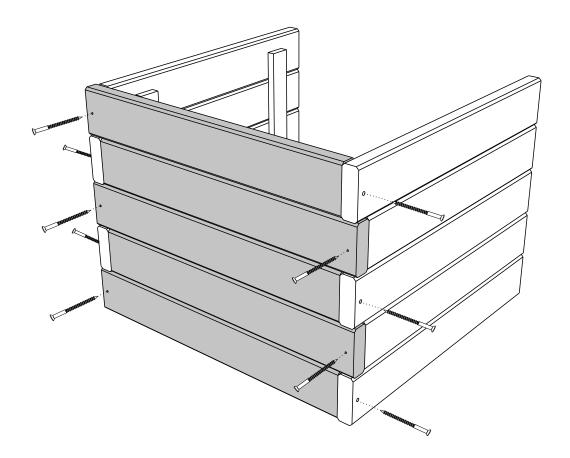





Screw

5 cm x10




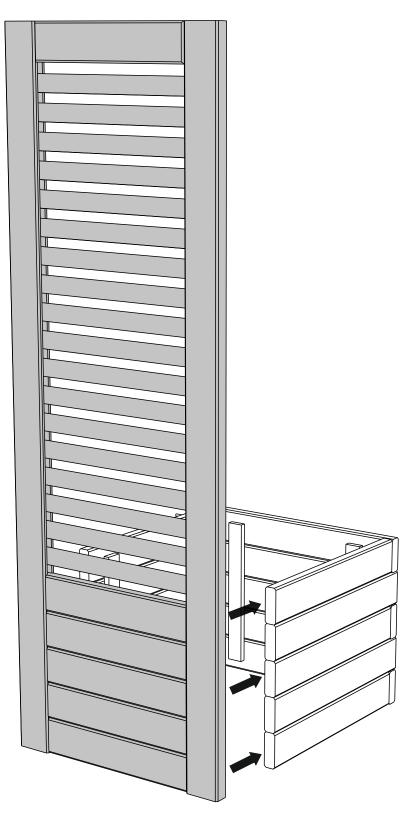


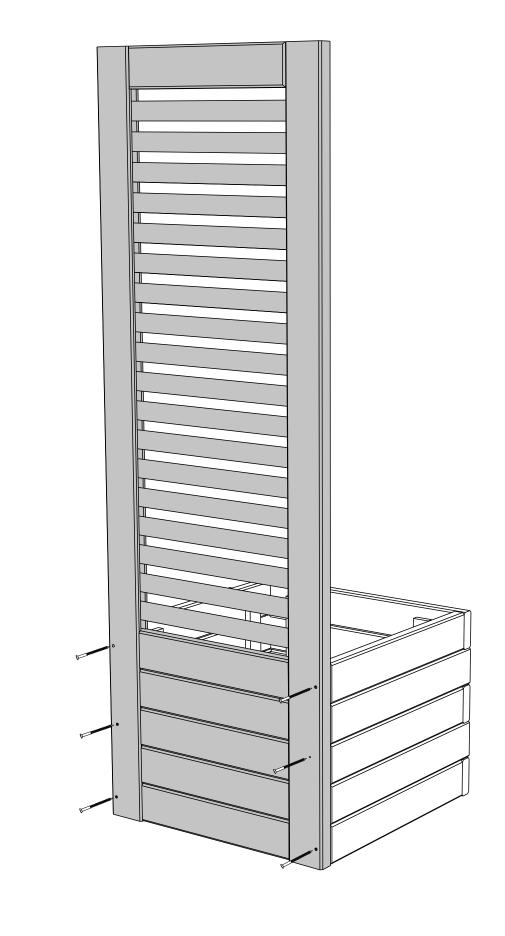

Screw

6 cm x6

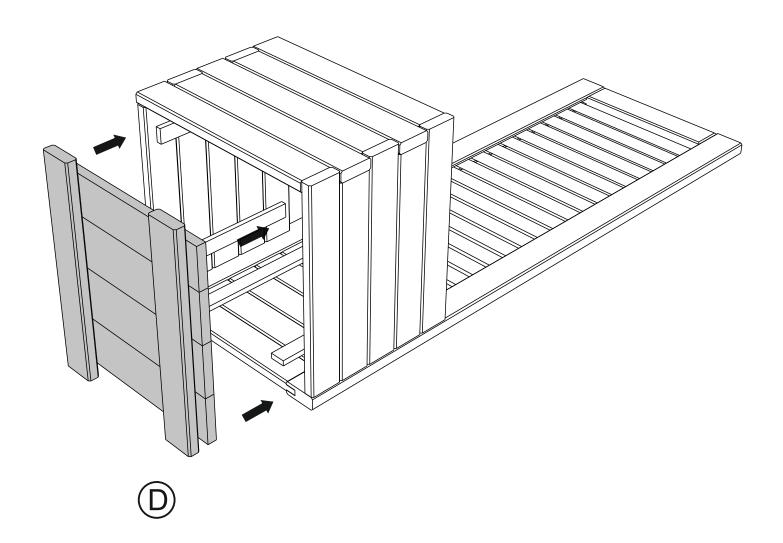

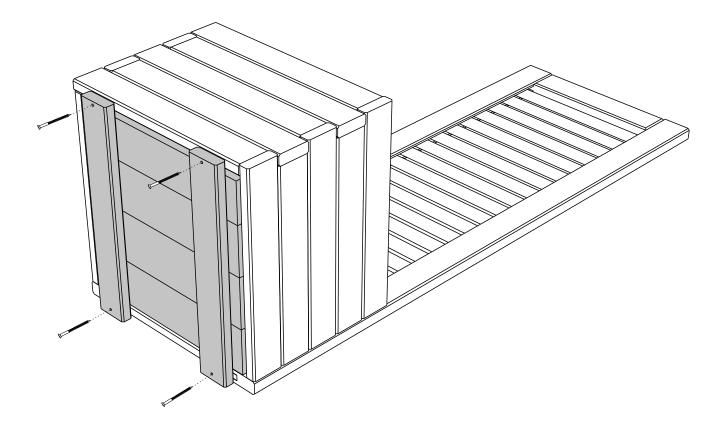



5 cm x4

