


# RUSTIC ROSE PERGOLA

RRPERG 252cm [H] x 240cm [W] x 240cm [D]  
221500A001AABZ06C1

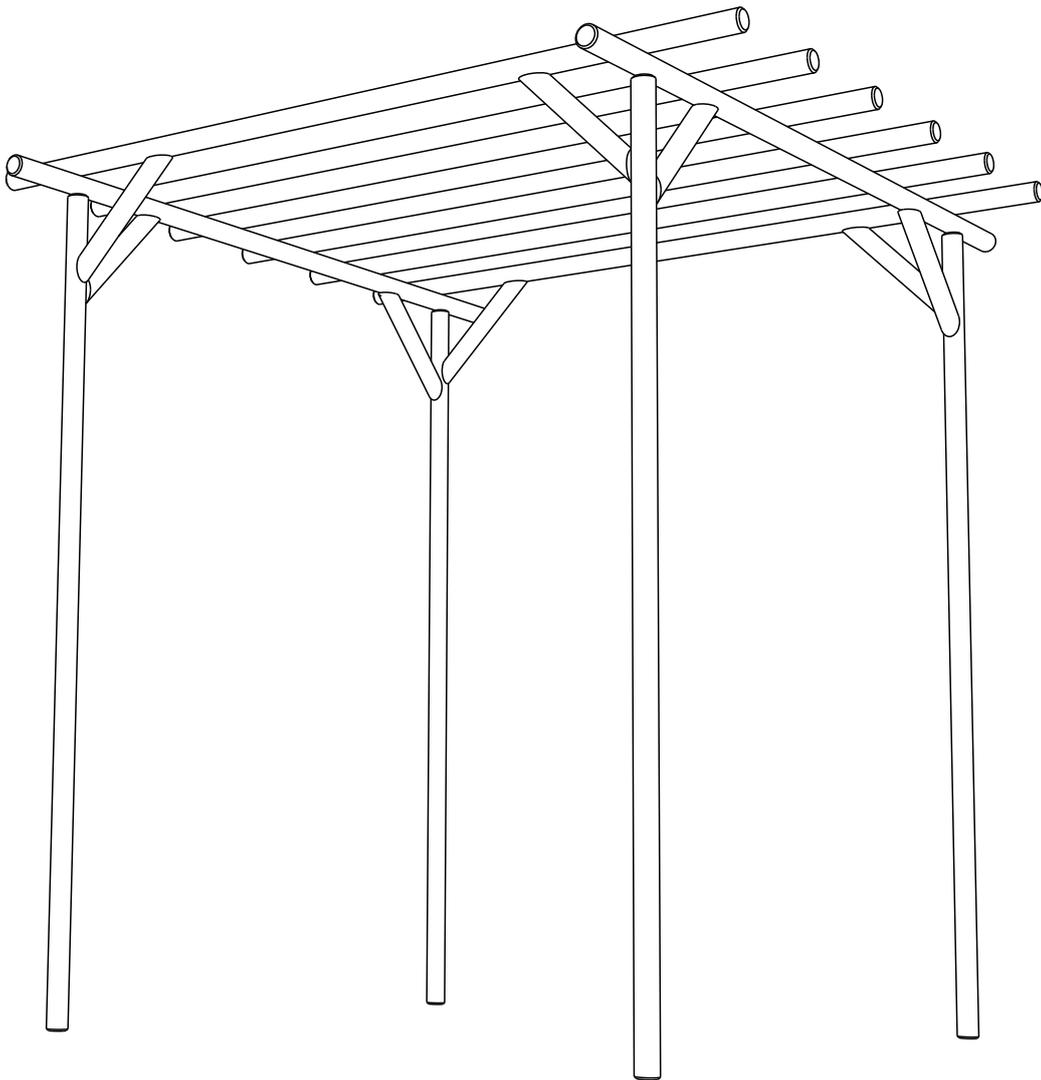

## **BEFORE YOU START**

Check the pack/s and make sure that you have all of the parts listed below.

If not, contact your retailer who will be able to help you.

When you are ready to start make sure you have the right tools to hand, plenty of space with a clean and dry area for assembly.

It is advisable for two people to carry out the work.

Where the wood is screwed we advise to pre-drill the holes (the diameter of the holes should be 2mm smaller than the diameter of the used screw)


## **HEALTH AND SAFETY**

Do not lean or stand on the roof assembly at any time - the structure is not of a load bearing design.


Do not overreach when working from the step ladder

In order to reduce the risk of suffocation please keep all plastic bags and small parts away from children.



Recommended tools ( not included )

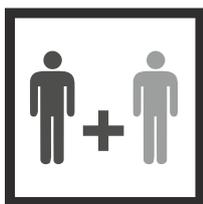

drill or screwdriver

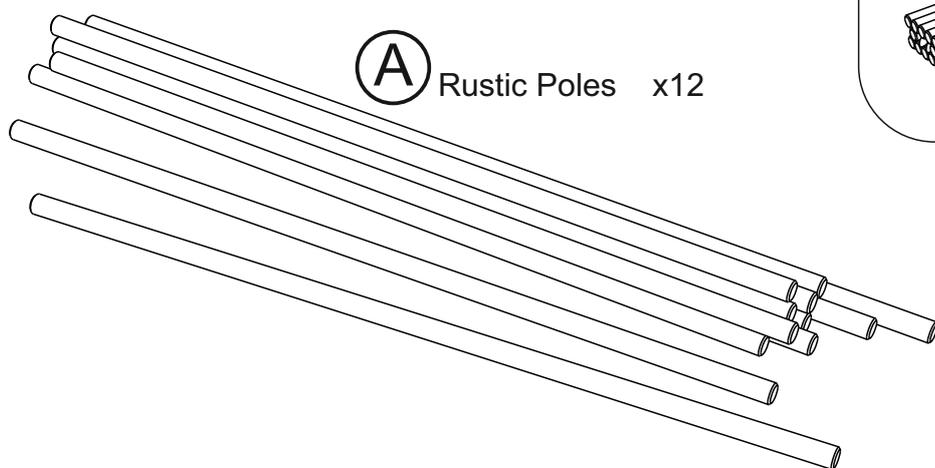

**(A)** Rustic Poles x12

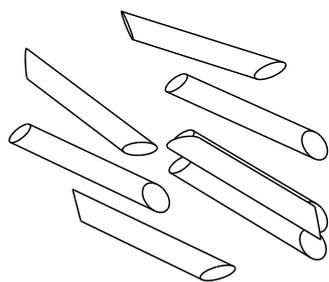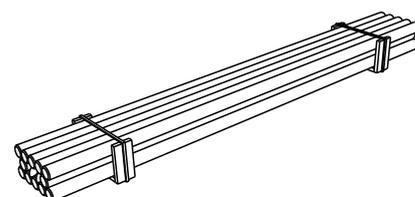

**(B)** Corner Supports x8

Hardware pack

[x]





Screw  
10 cm  
x18

[y]




Screw  
8 cm  
x16





PLAN

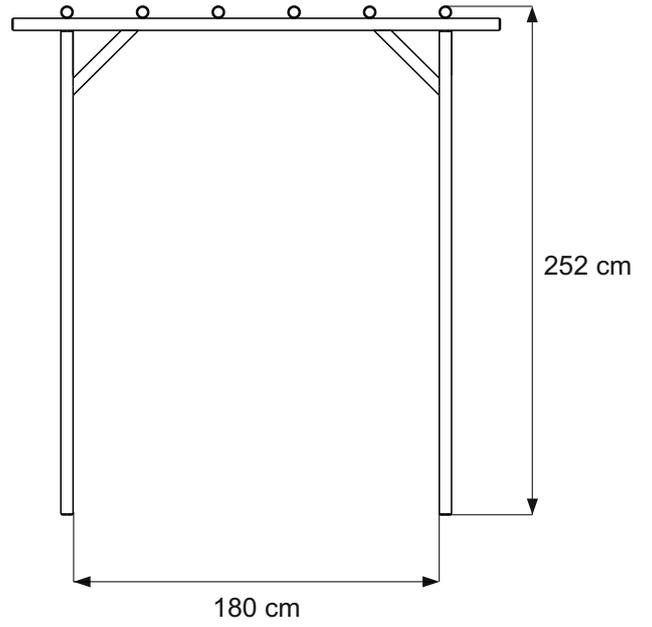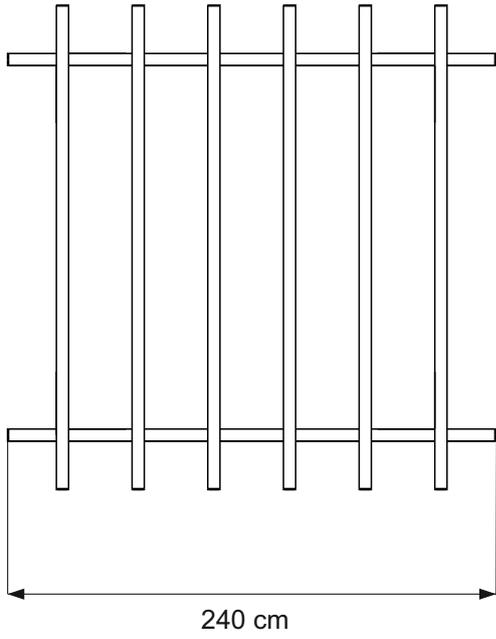

FOOTPRINT



1


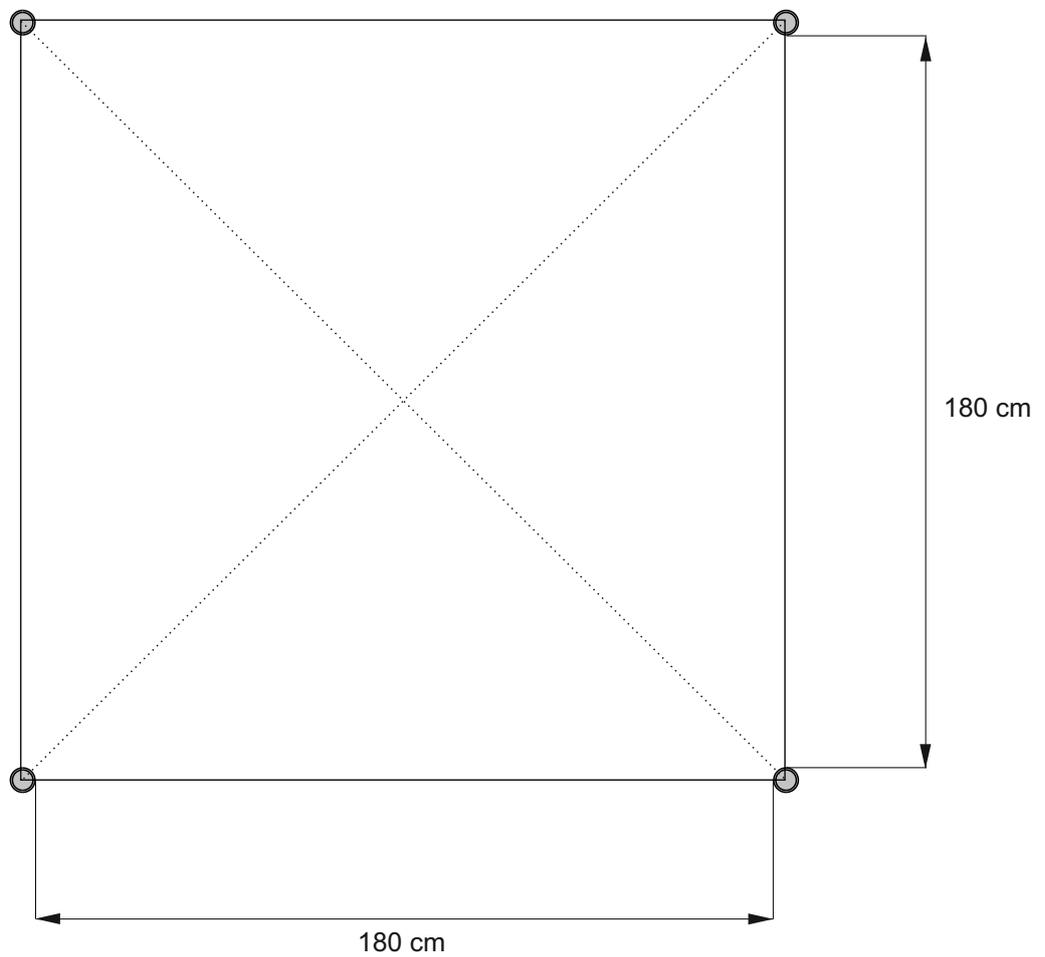


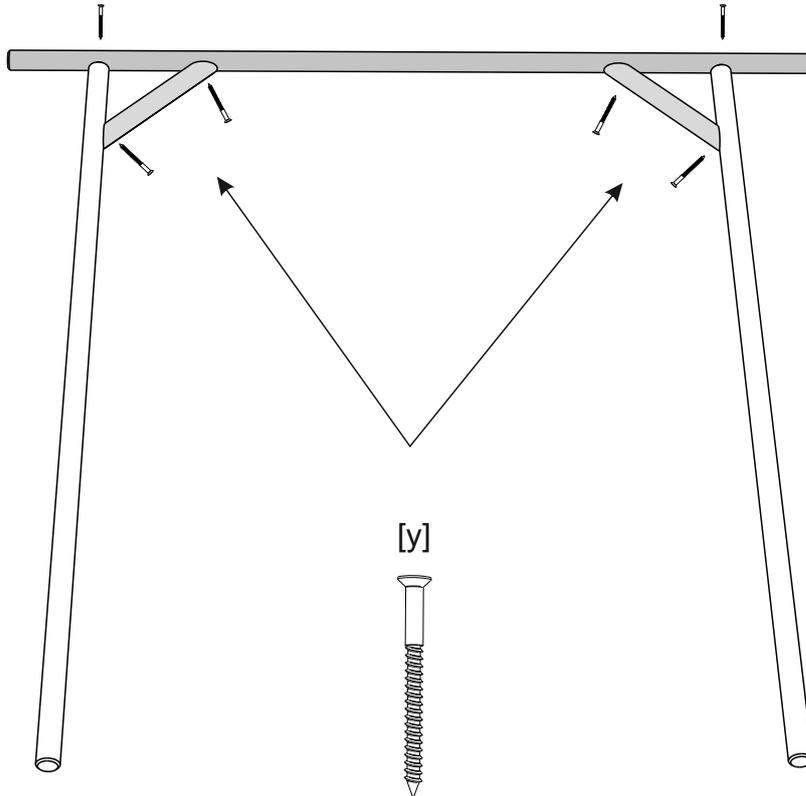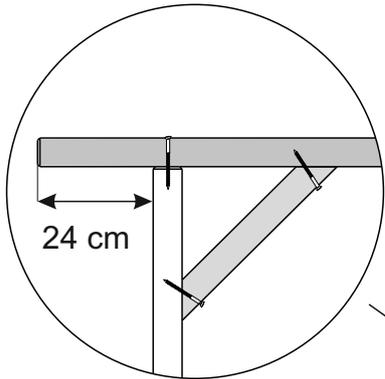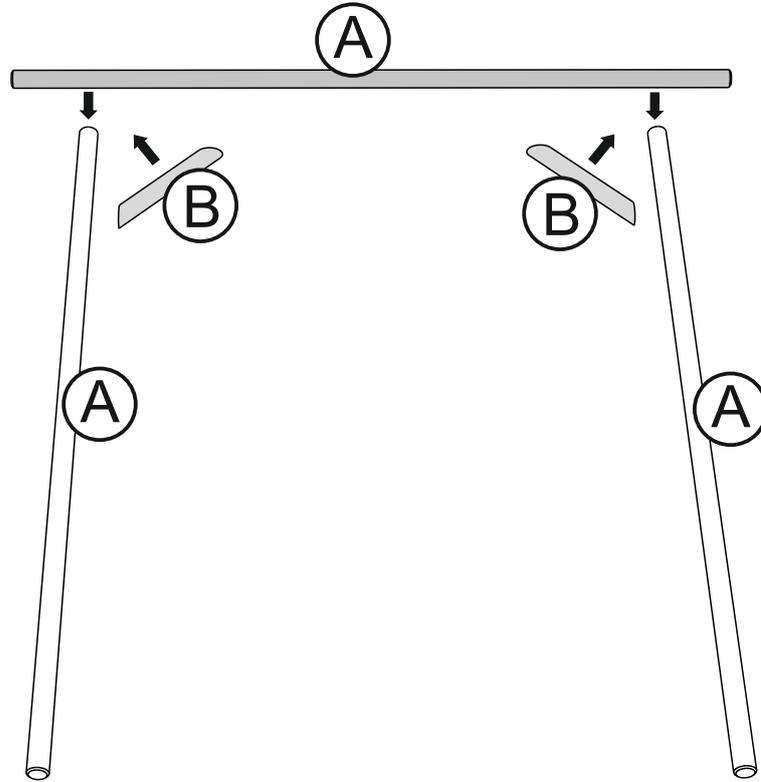
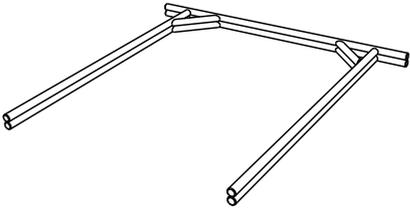


[y]



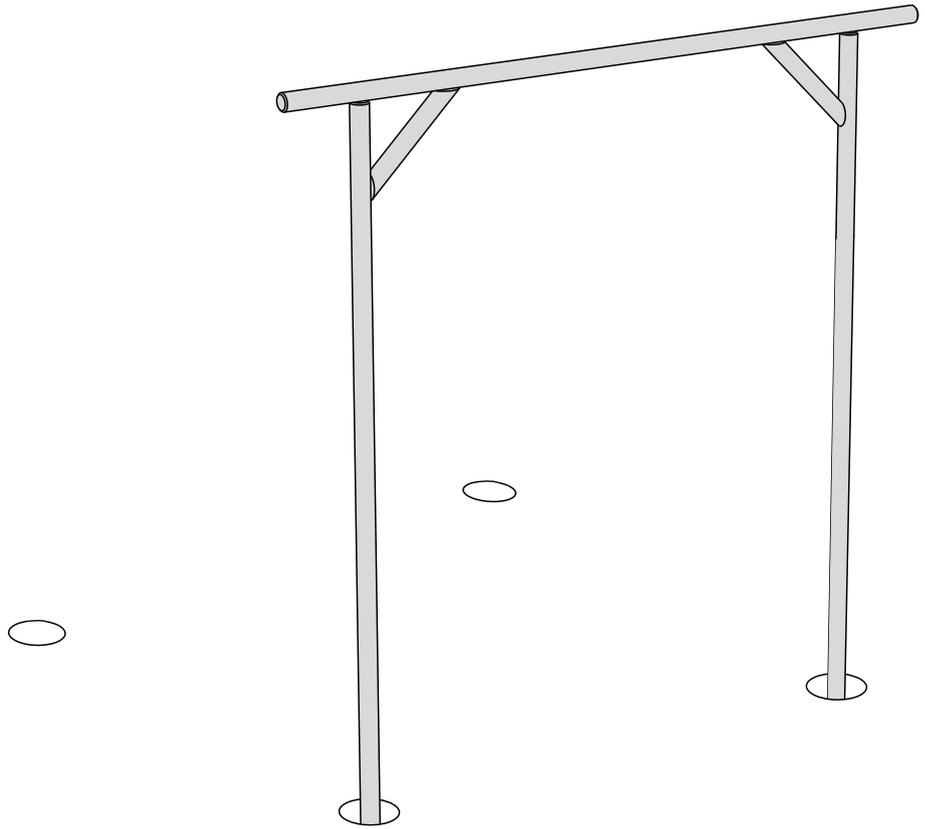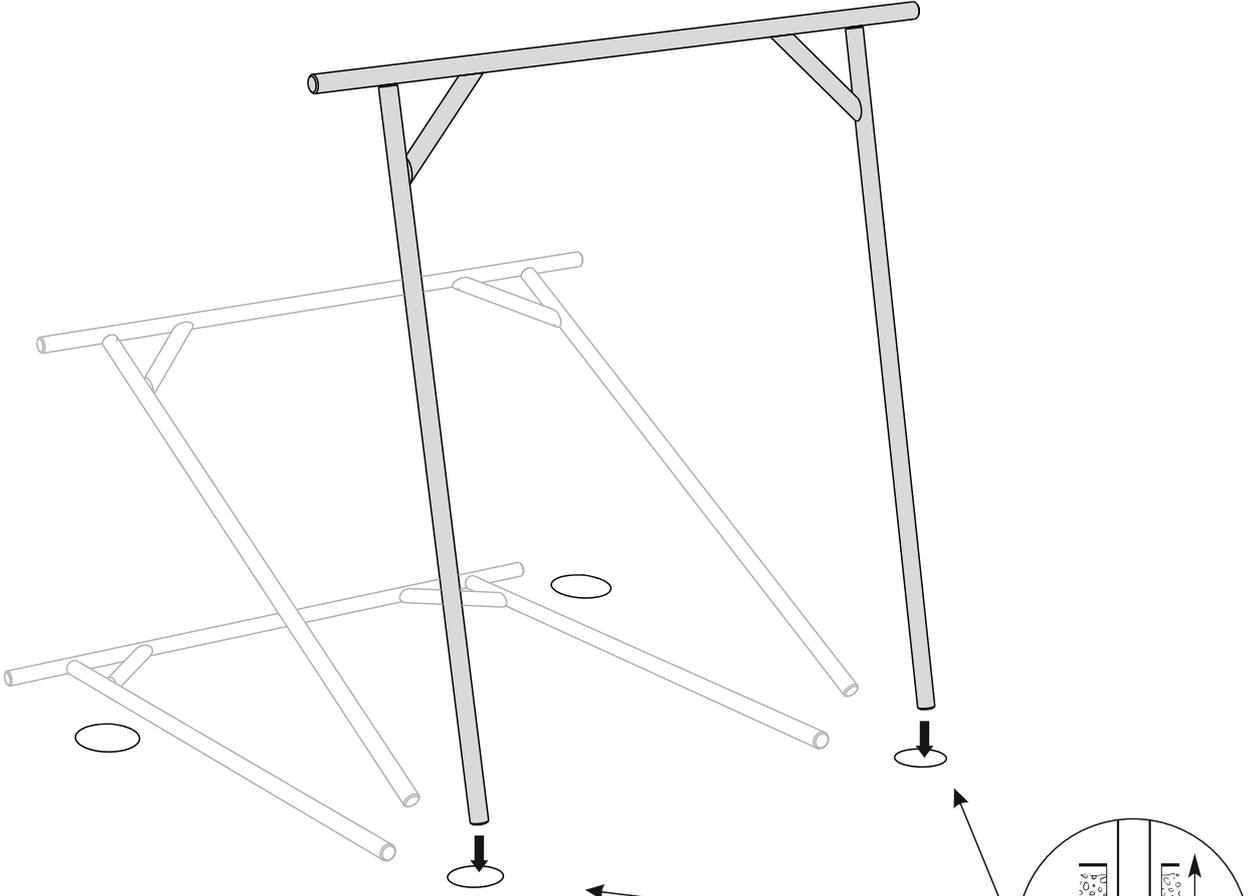


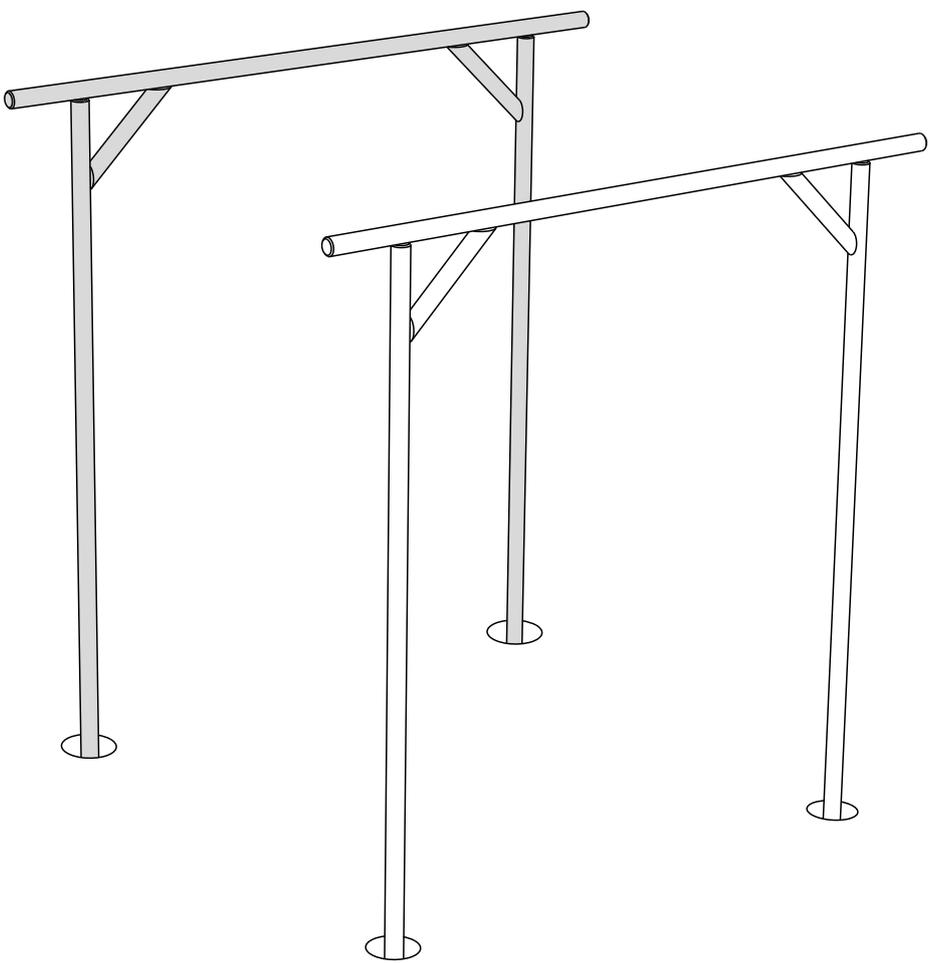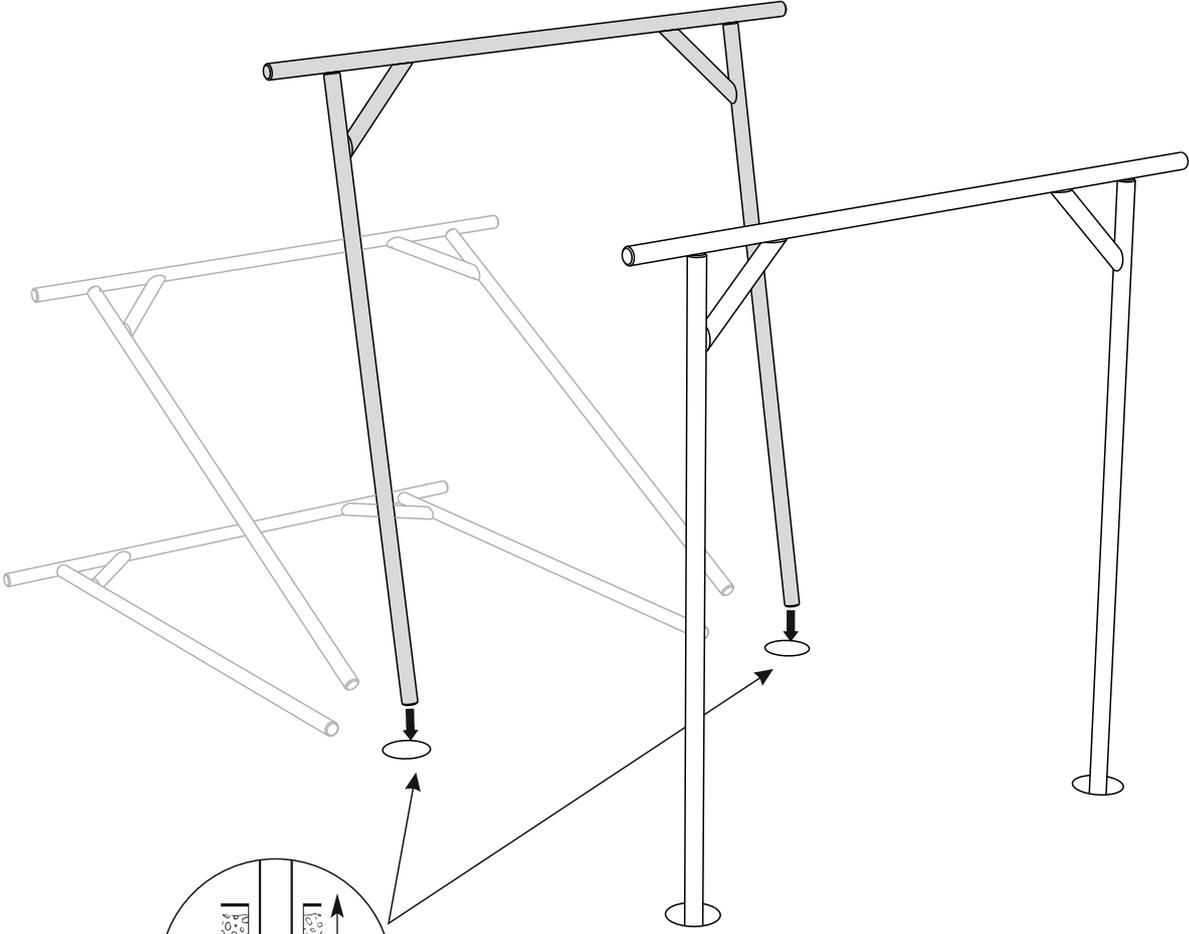

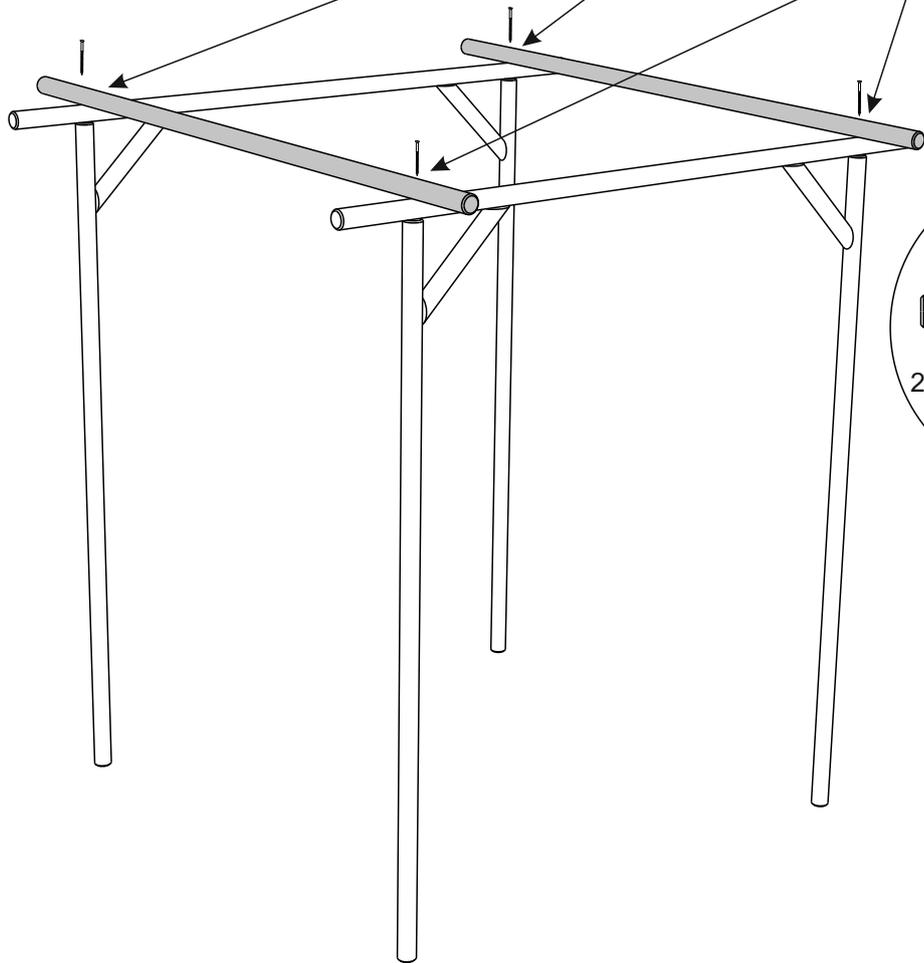
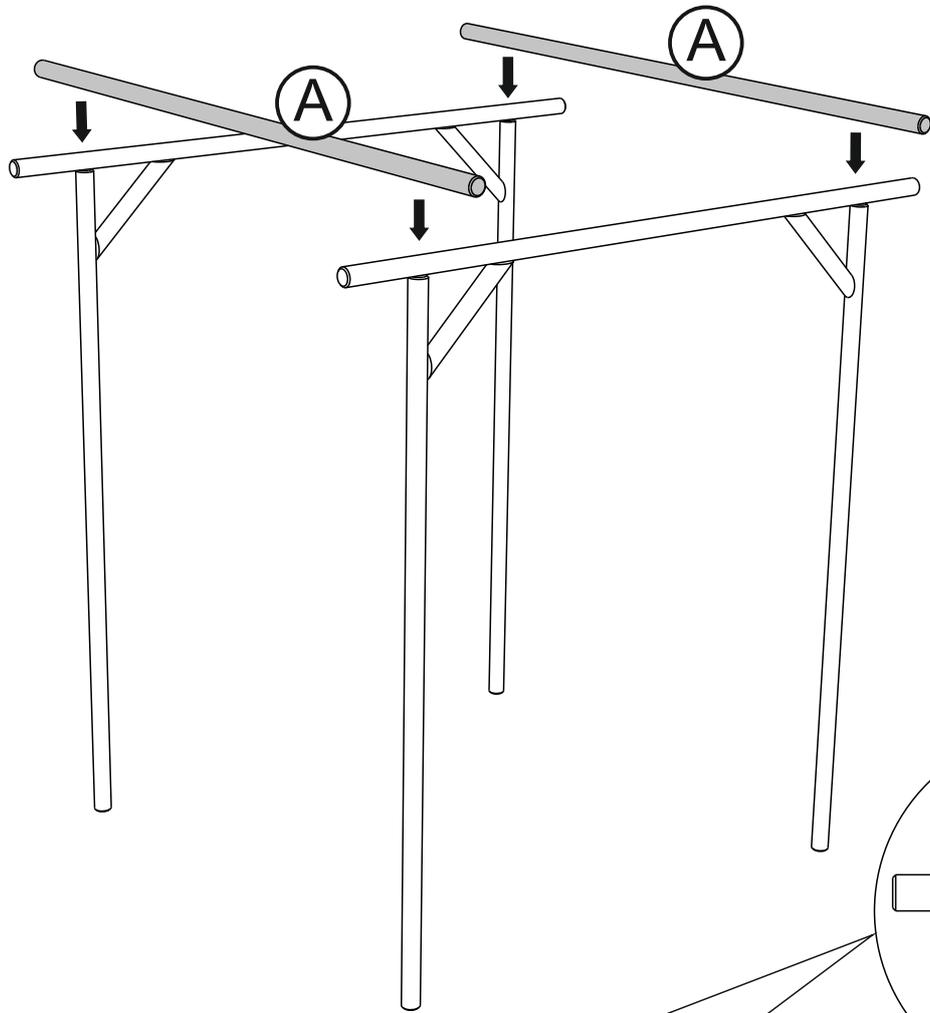



24 cm



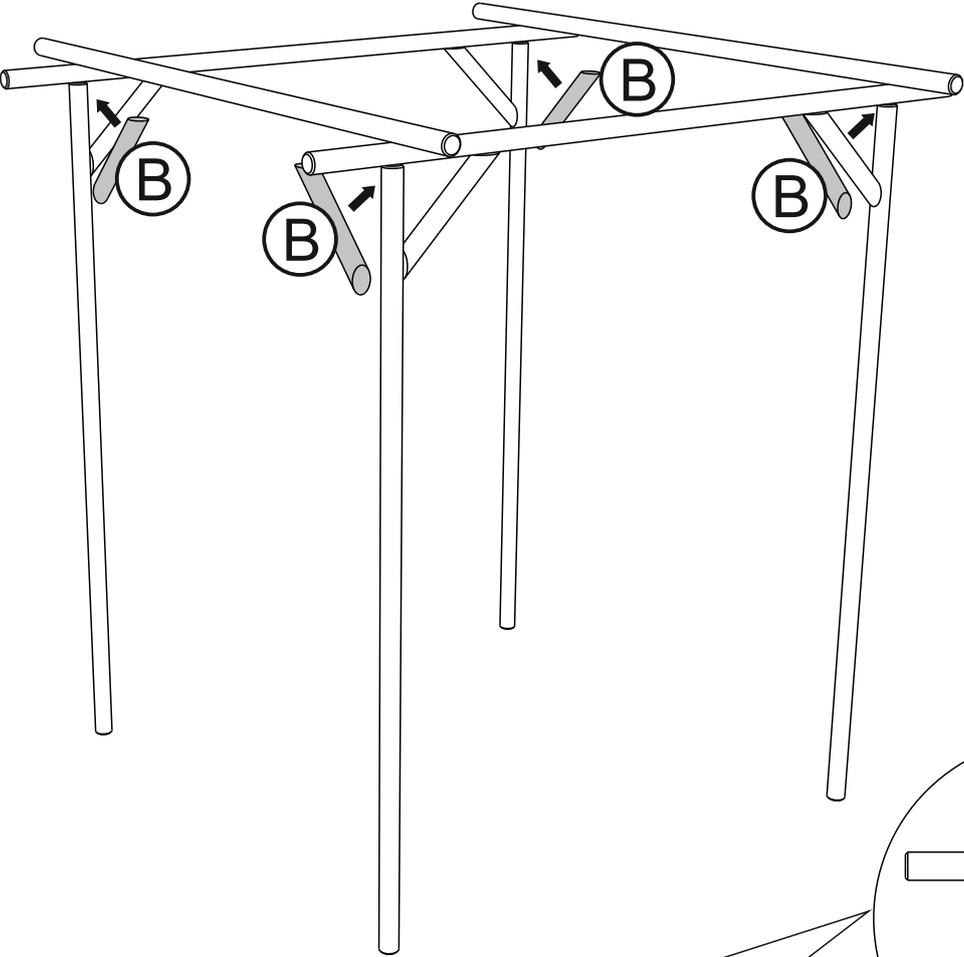


[y]

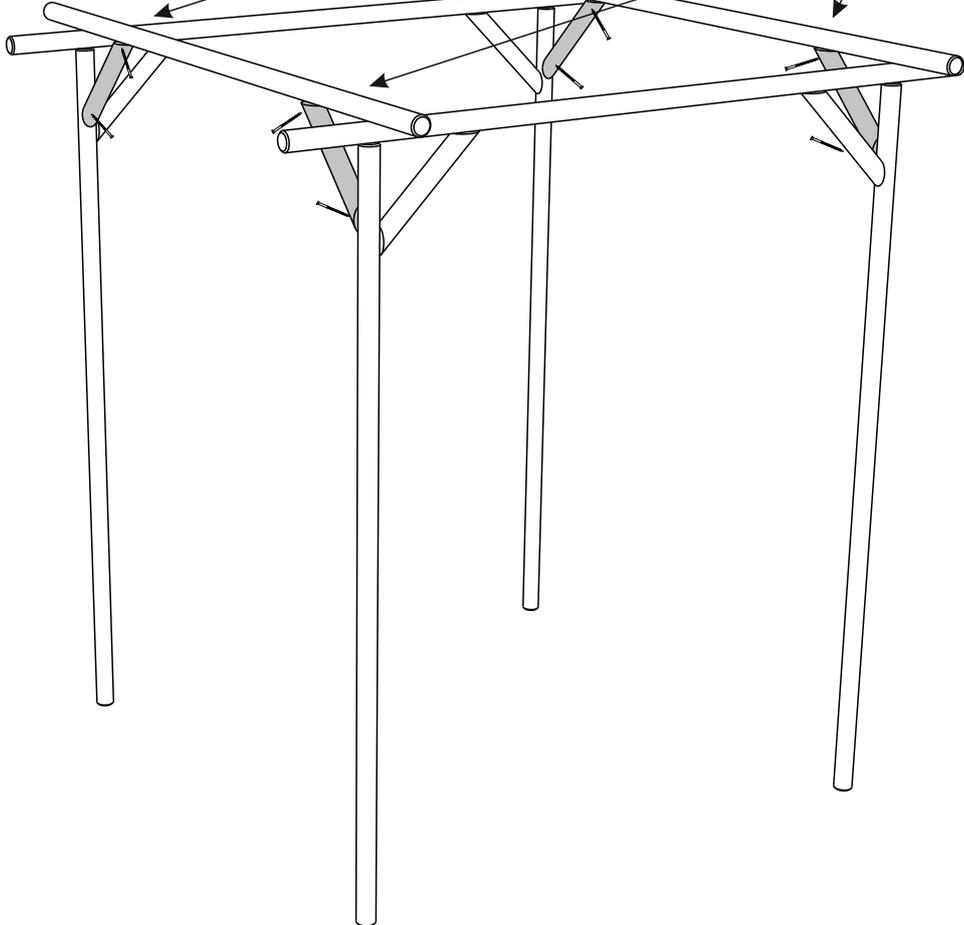
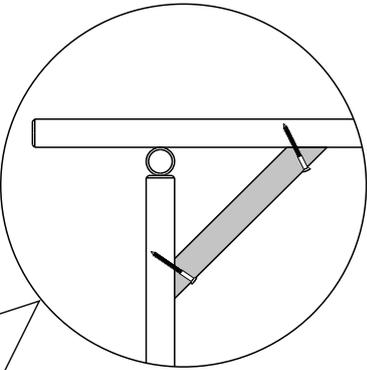


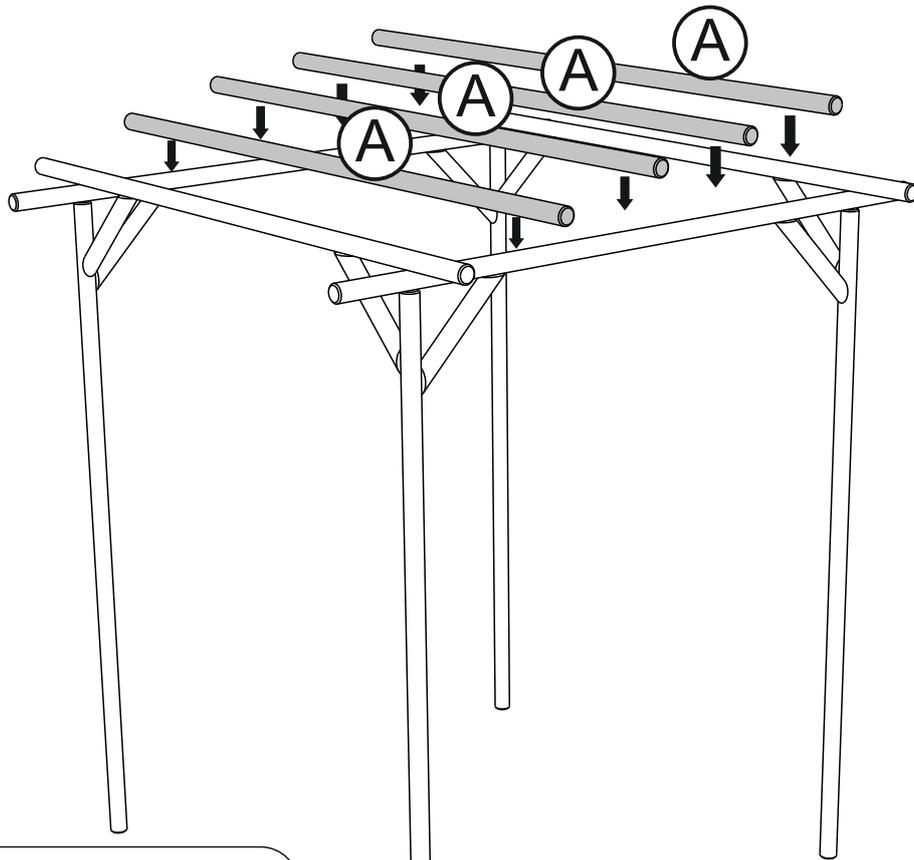

[X]

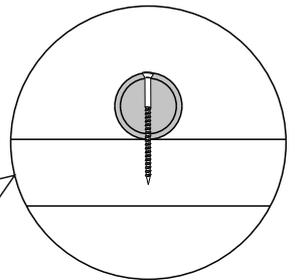

31,2 cm

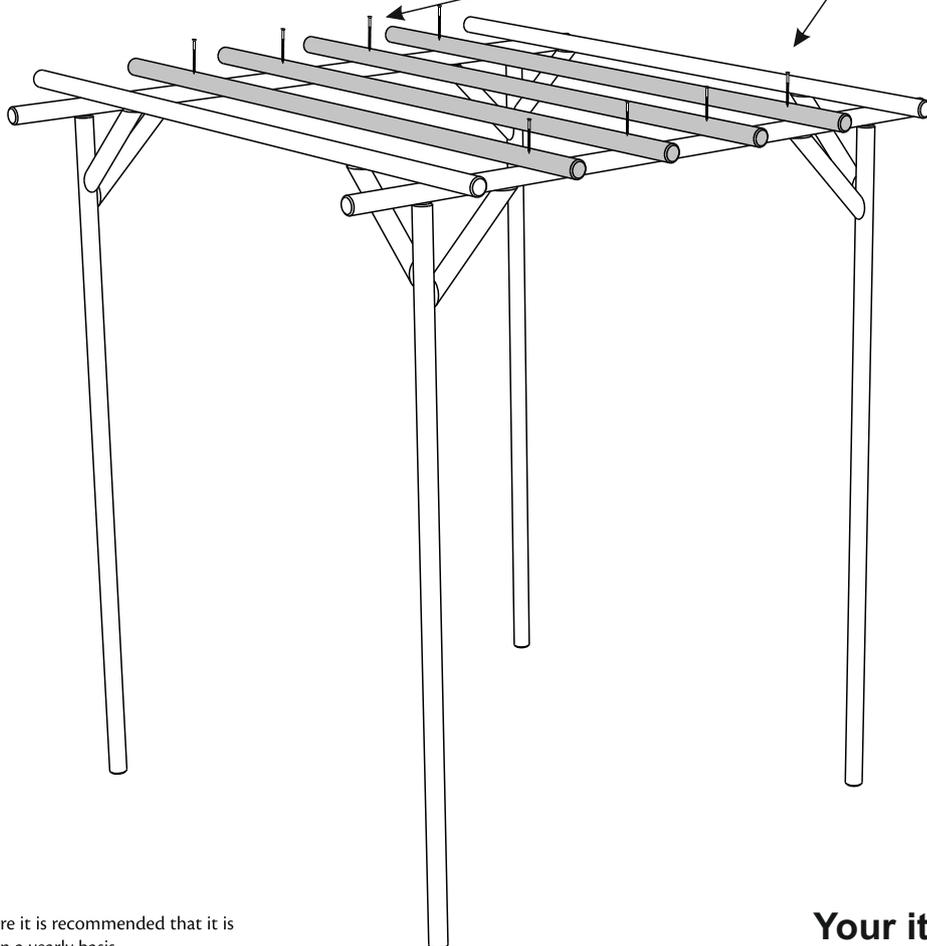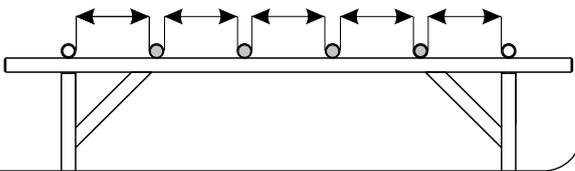**AFTERCARE**

To ensure longevity of your structure it is recommended that it is treated with a wood preservative on a yearly basis.

**Your item is ready!**