


FLOWER WALK PERGOLA

[PACK A]

FLWCCL 228cm [H] x 240cm [W] x 258cm [D]

221902A001MMBZ01C1

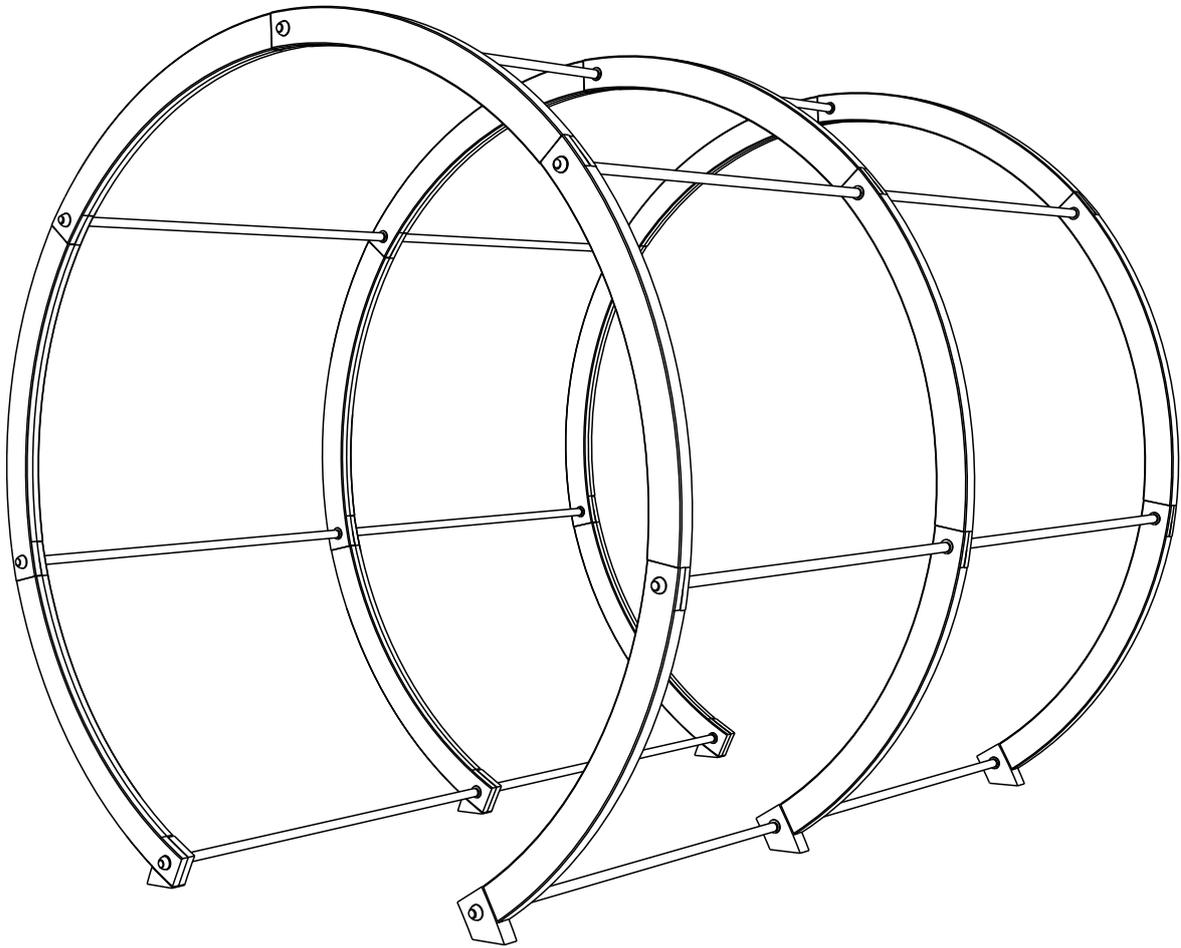

BEFORE YOU START

Check the pack/s and make sure that you have all of the parts listed below.



If not, contact your retailer who will be able to help you.

When you are ready to start make sure you have the right tools to hand, plenty of space with a clean and dry area for assembly.





It is advisable for two people to carry out the work.

Where the wood is screwed we advise to pre-drill the holes (the diameter of the holes should be 2mm smaller than the diameter of the used screw)

Recommended tools (not included)

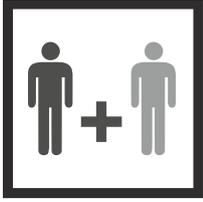


drill or screwdriver

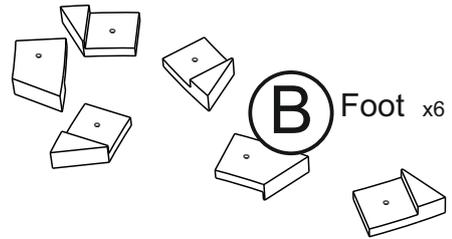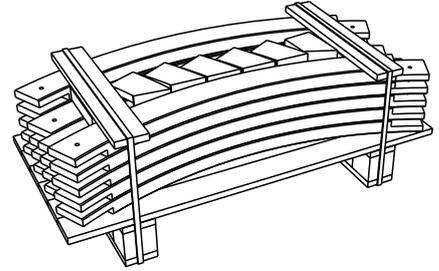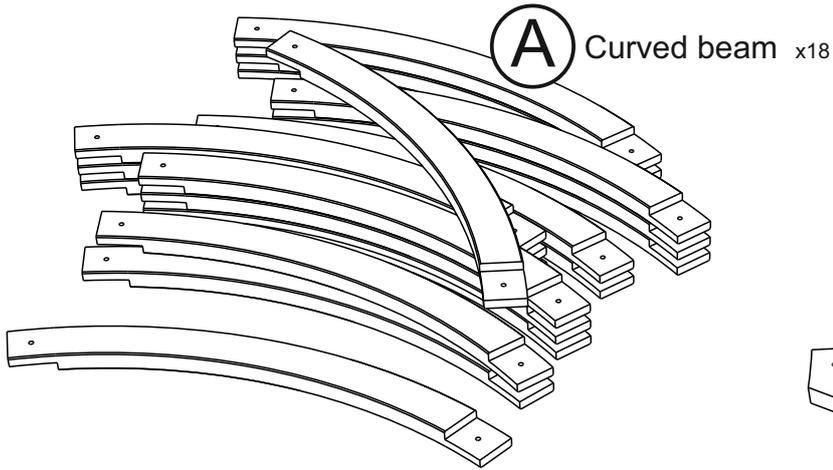

Hardware pack

[a] Washer x42



[b] Plastic cup x14




[c] Cap x14




[d] 10 mm NUT x17




[e] M10 x 70 hex bolt x7




[f] Screw 4 cm x66

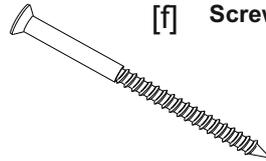


[g] Metal rods 7 cm x7


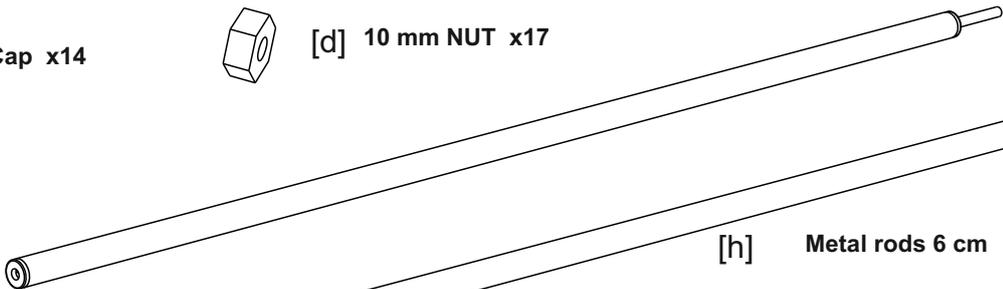


[h] Metal rods 6 cm x7

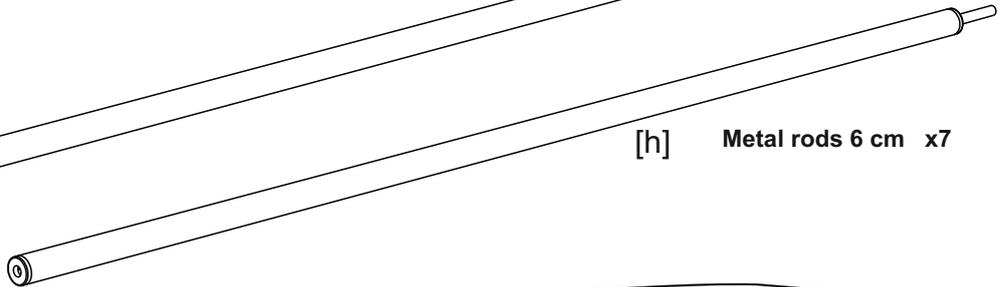

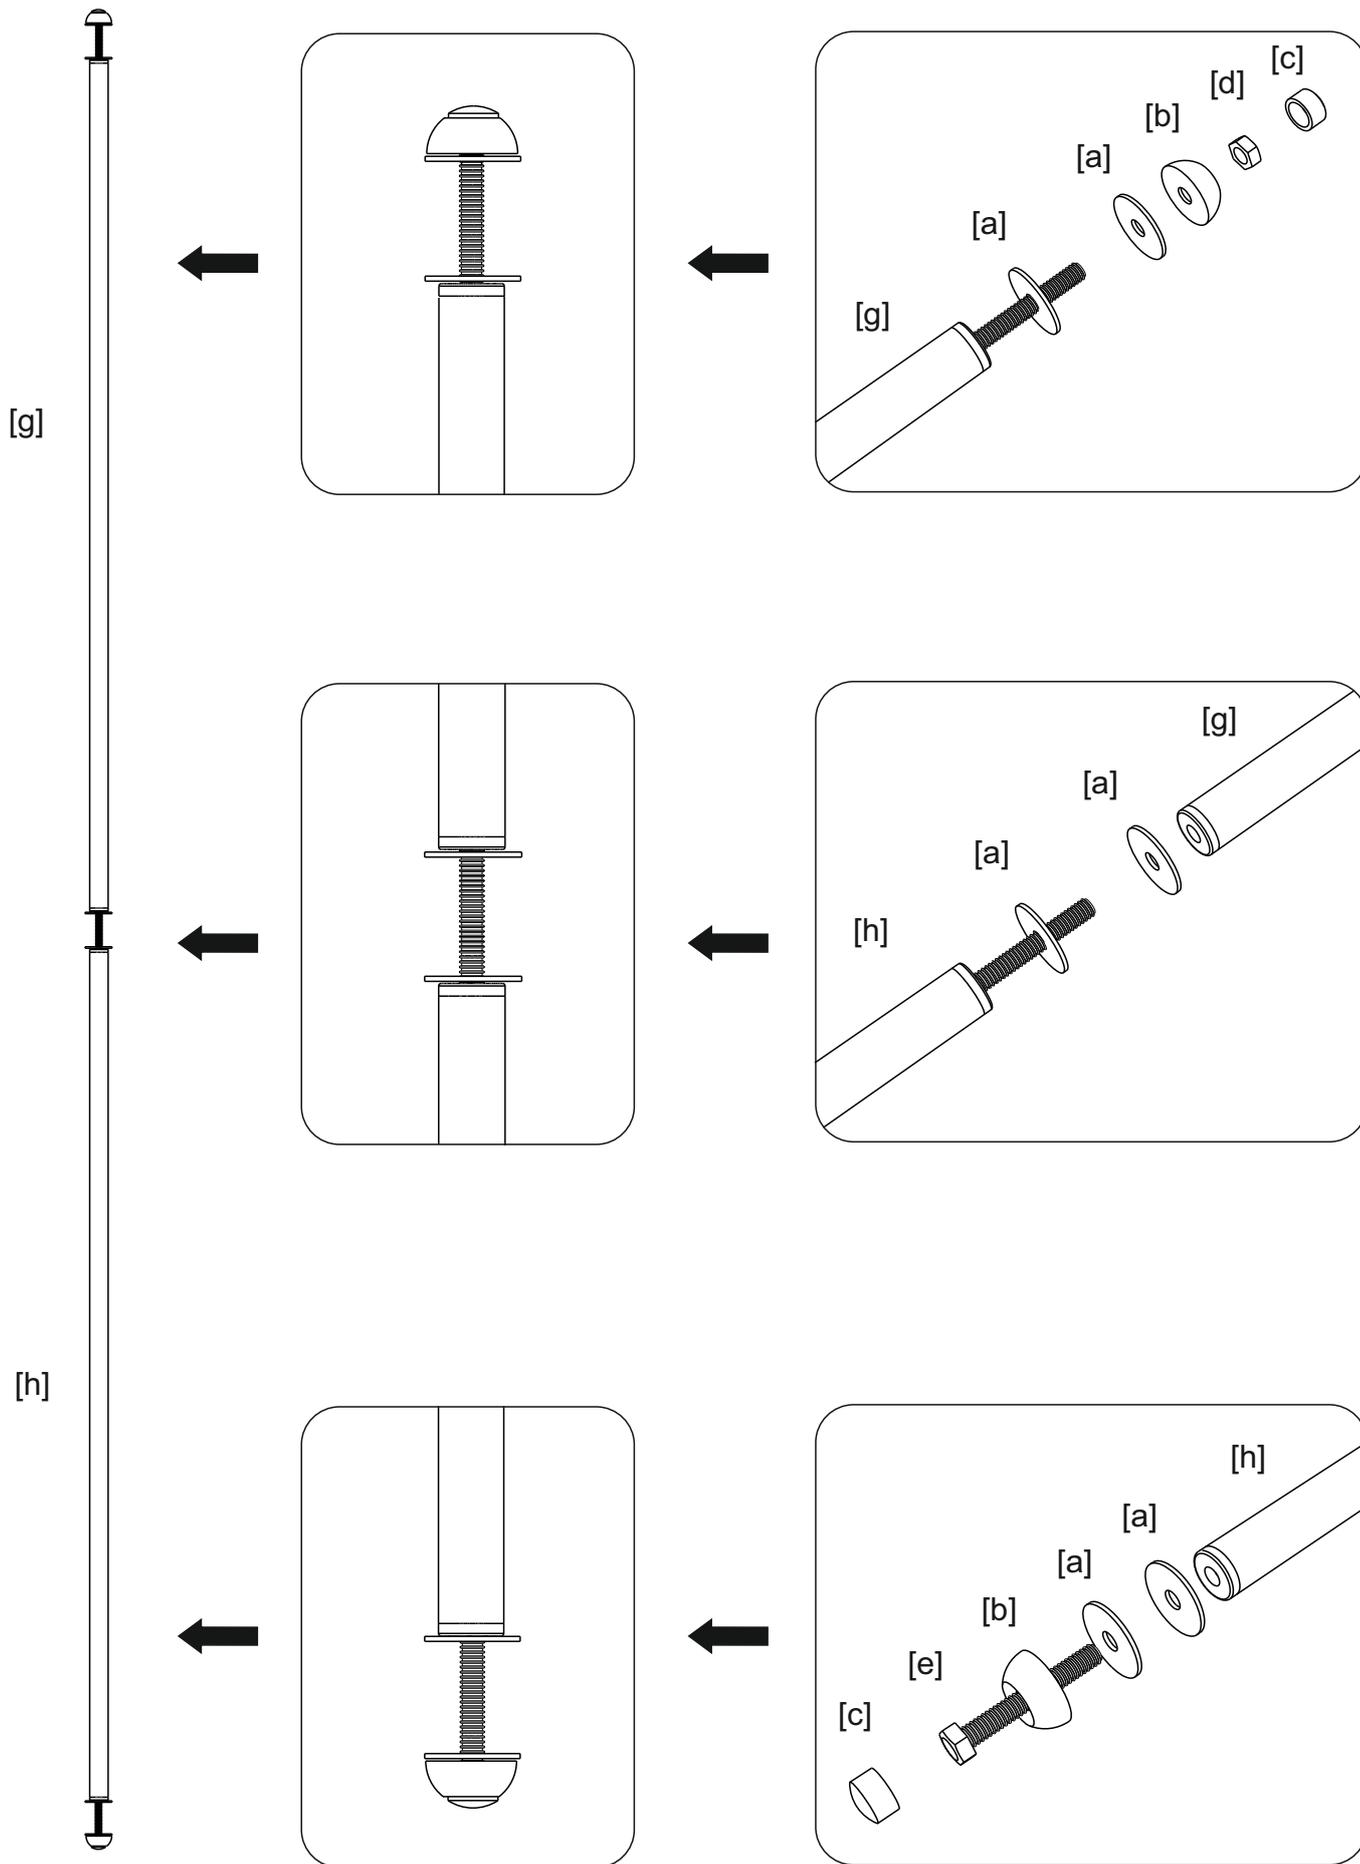





PLAN


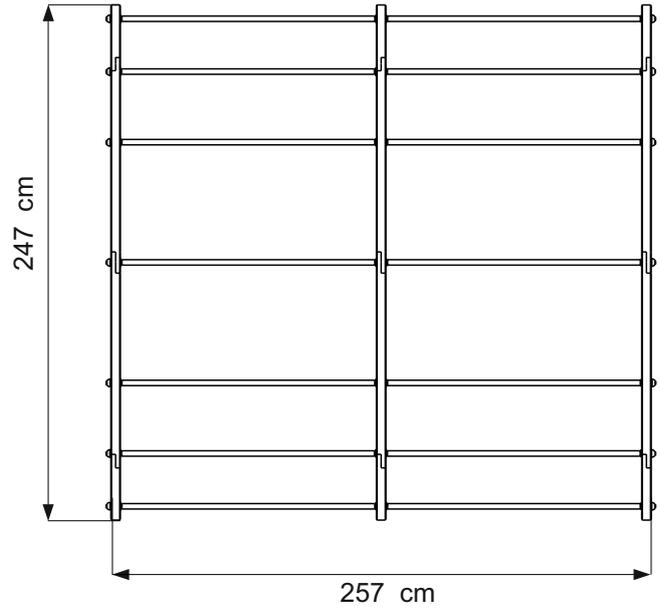
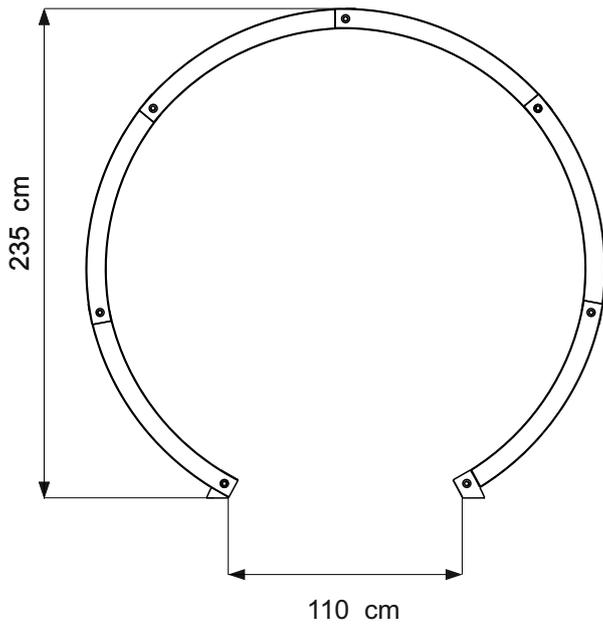





FOOTPRINT




1



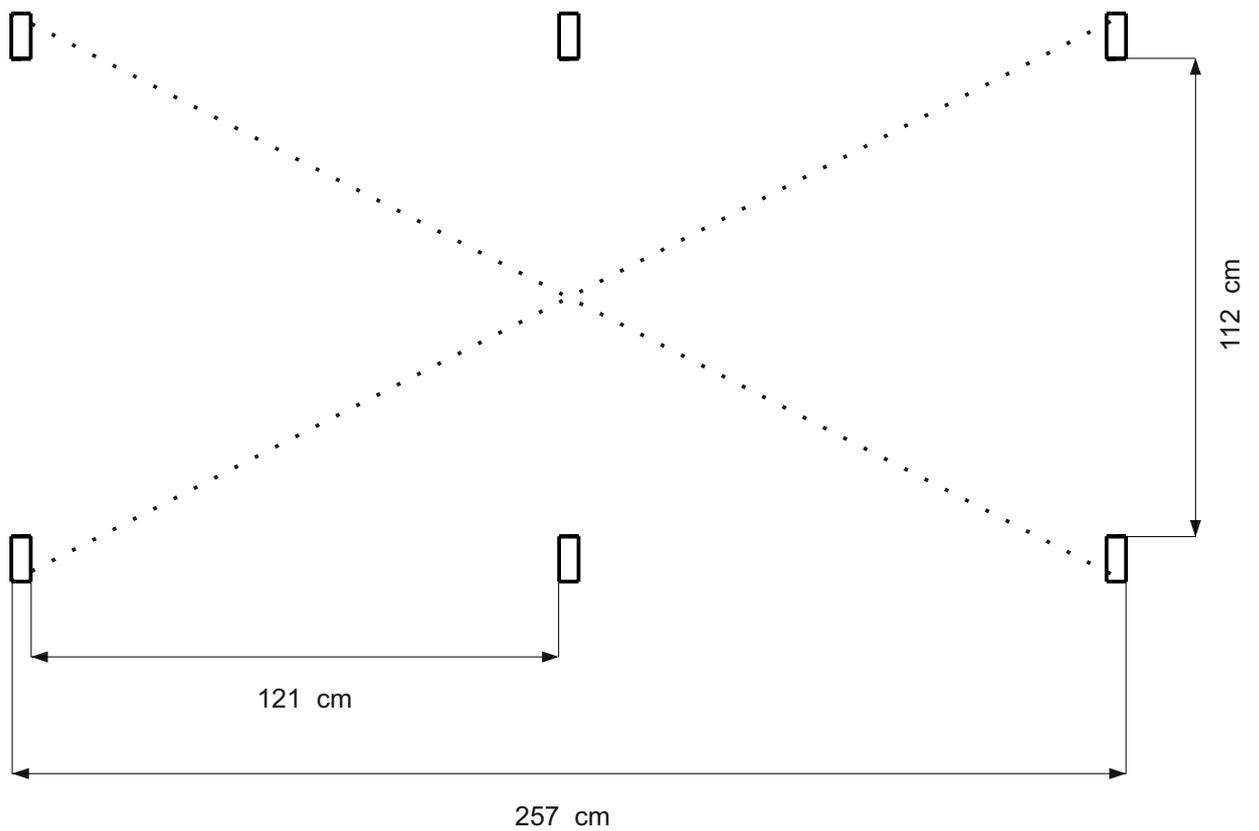


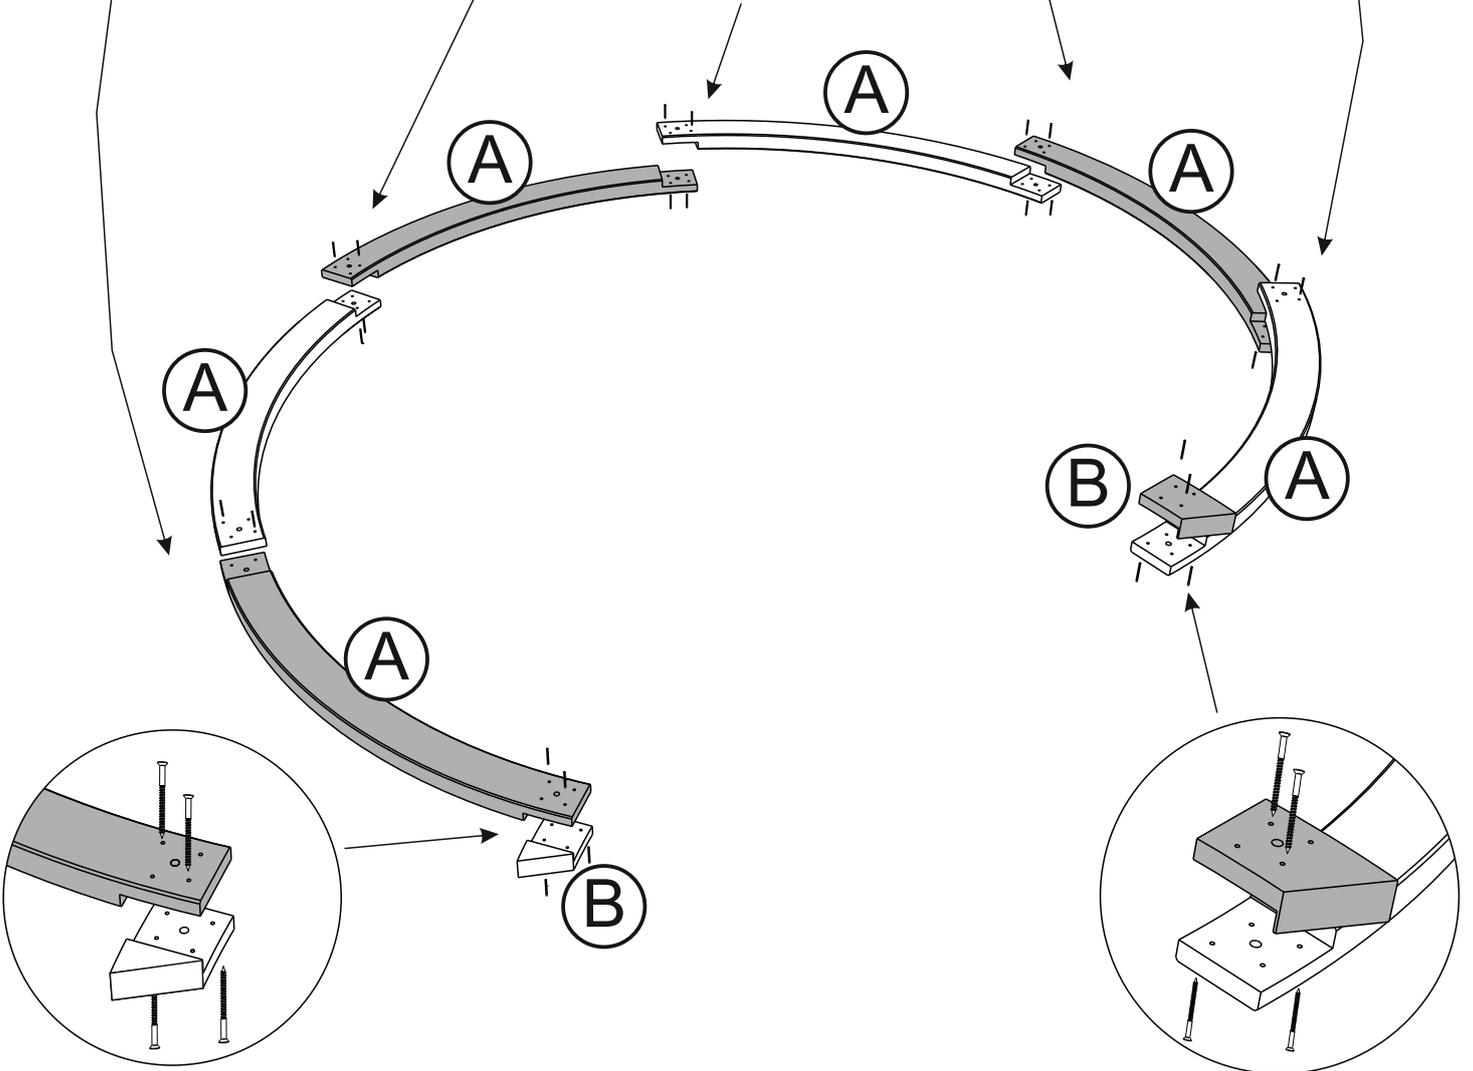
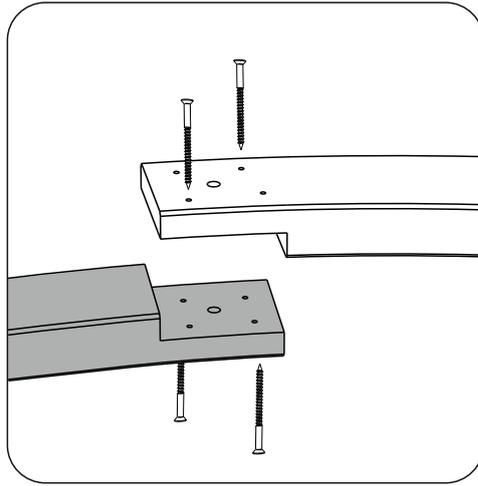
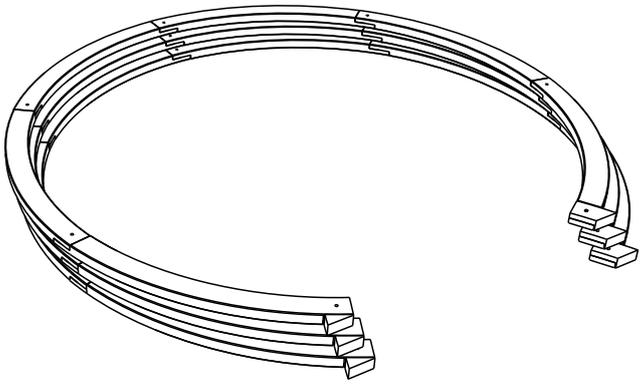


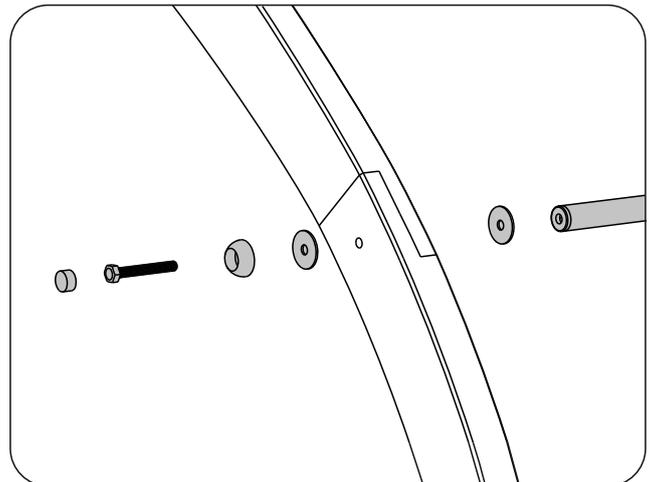
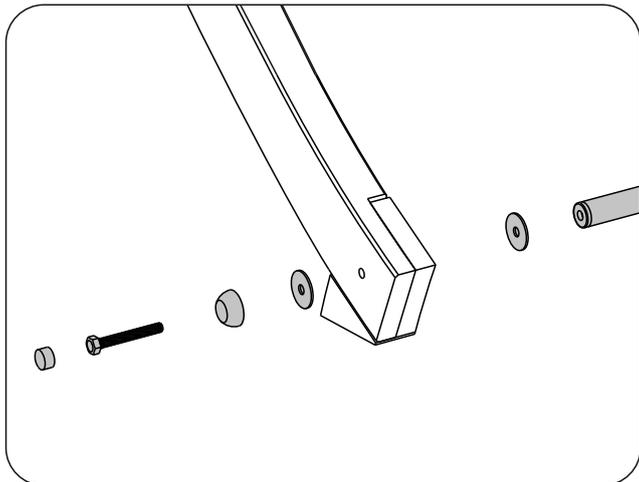
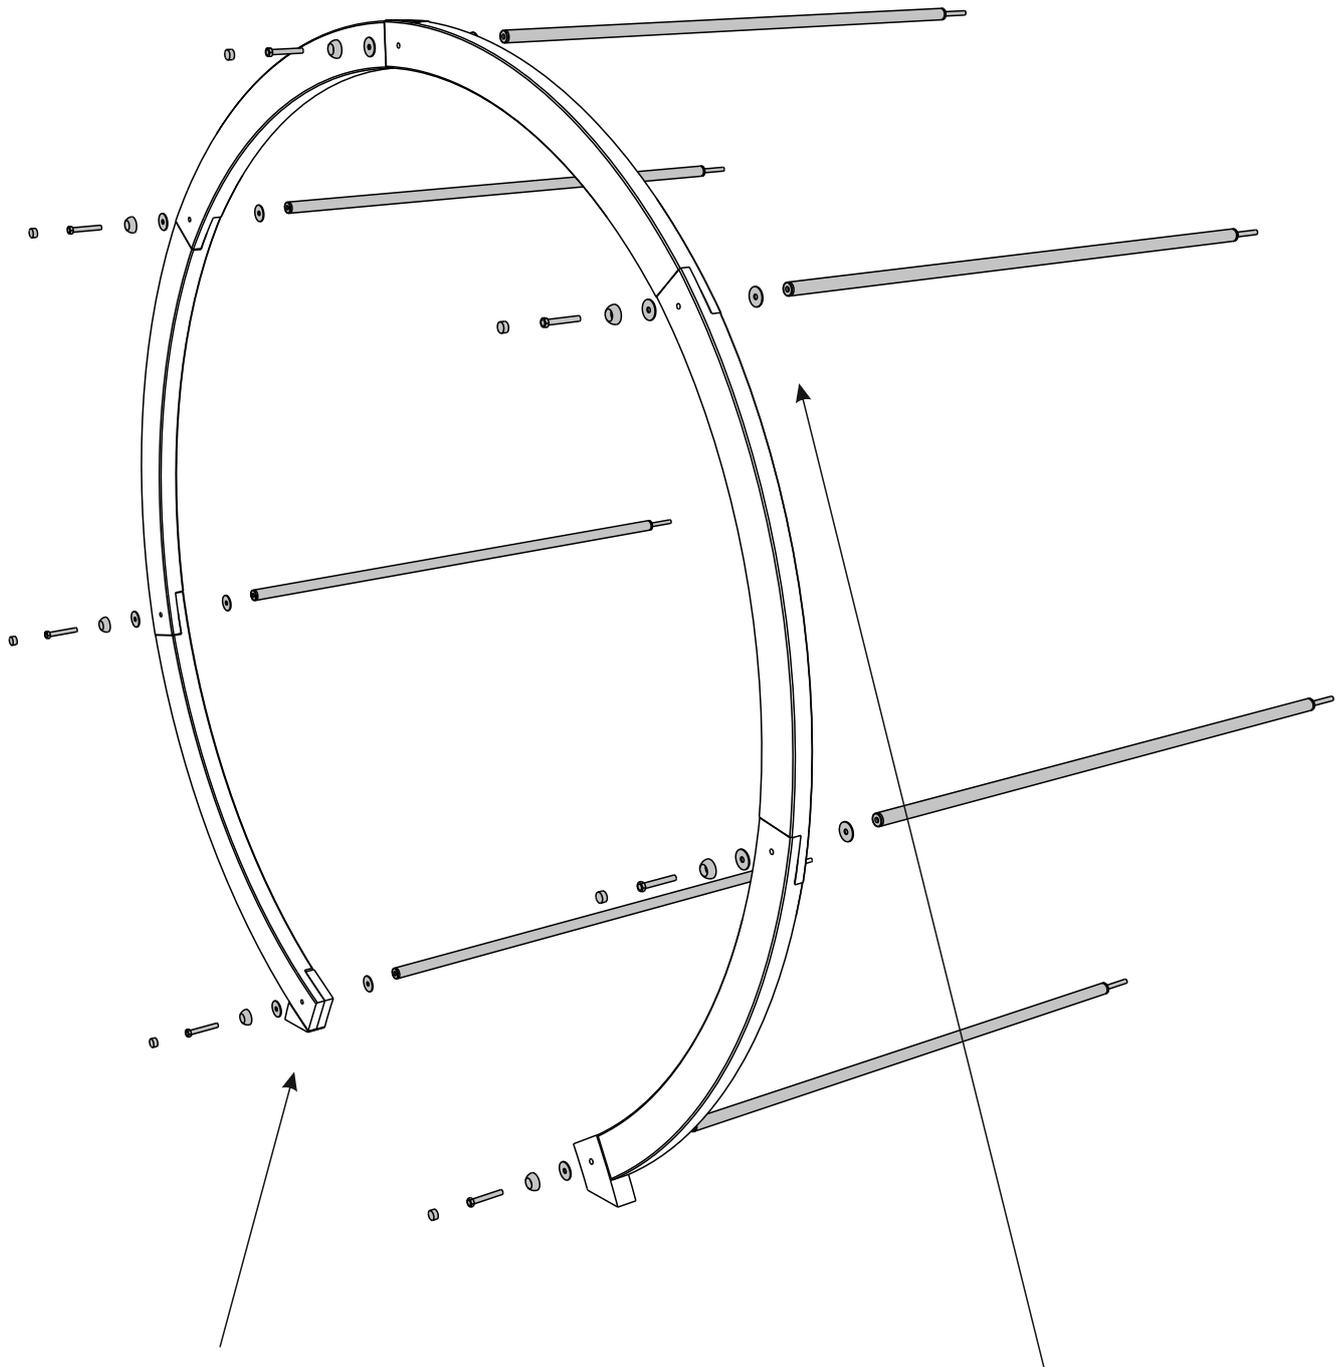


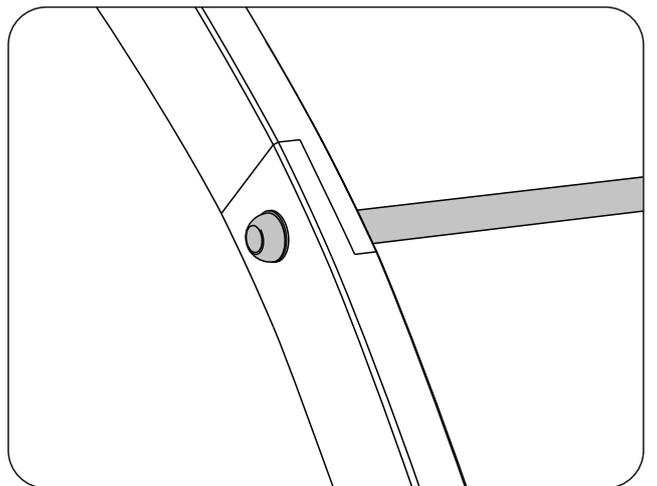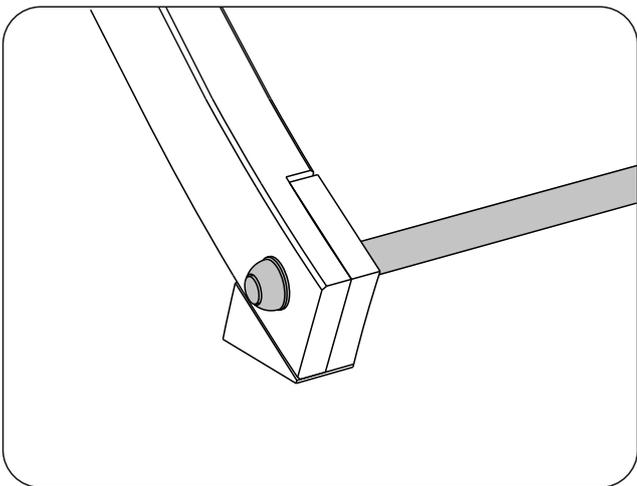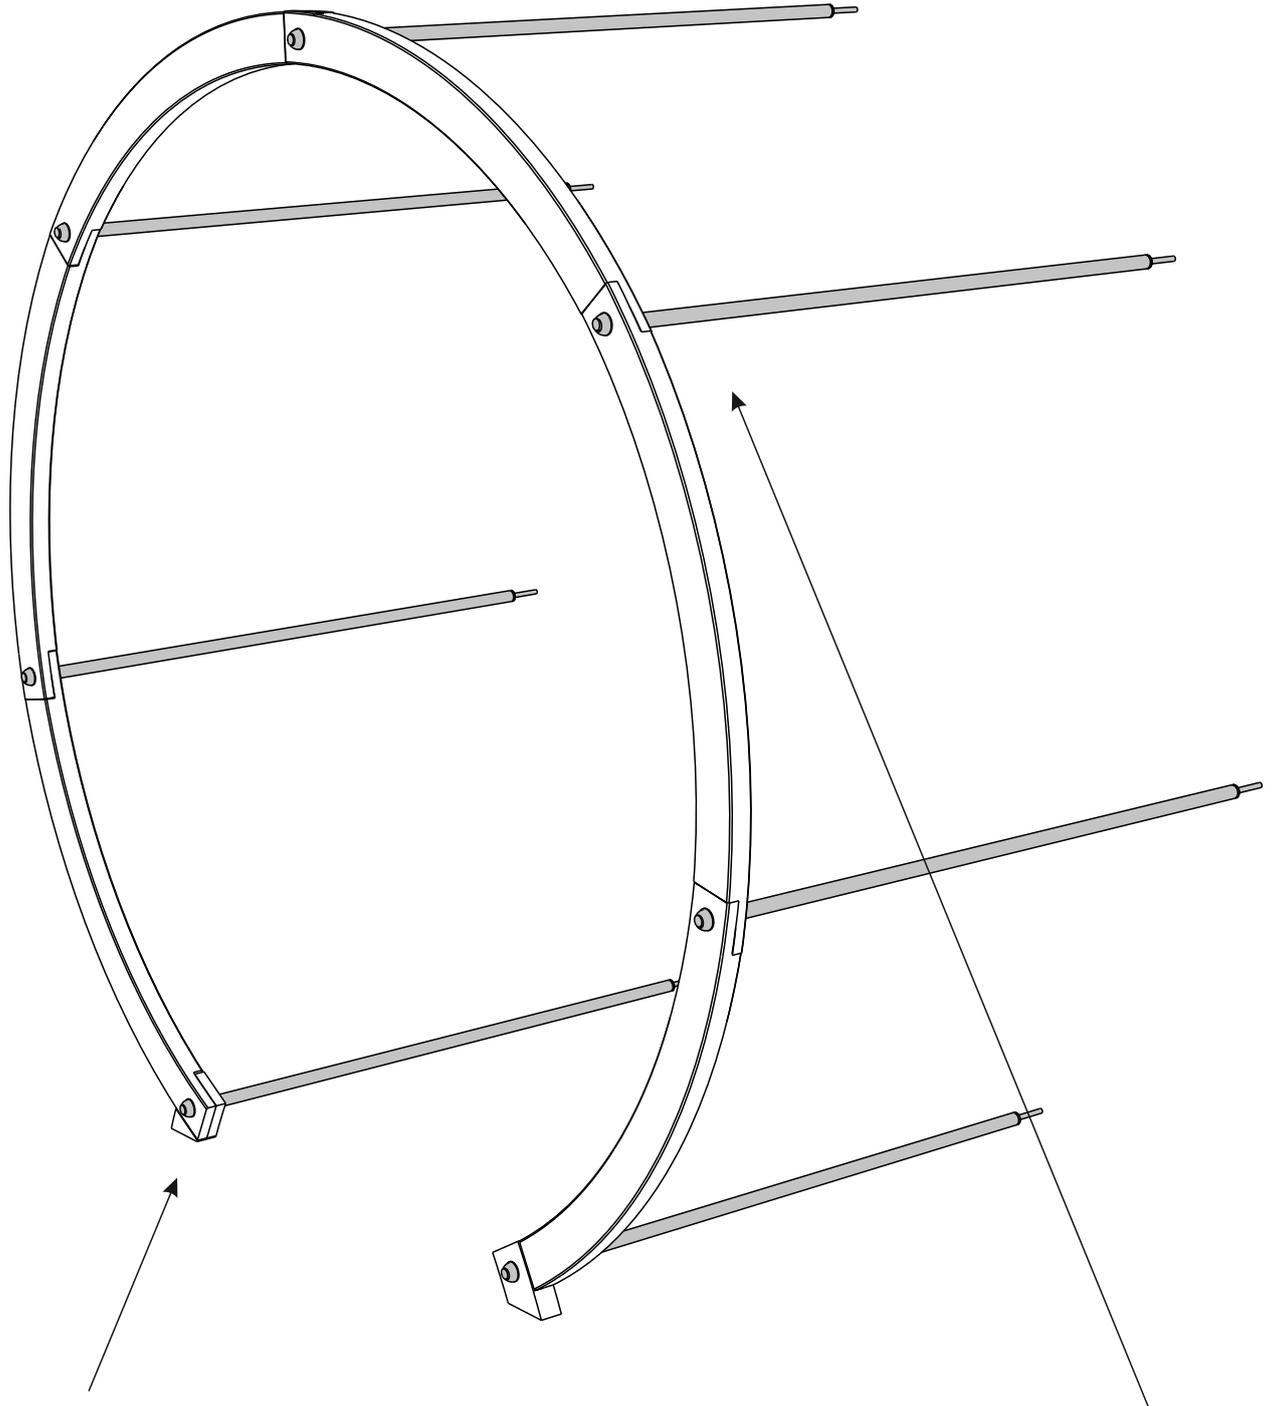

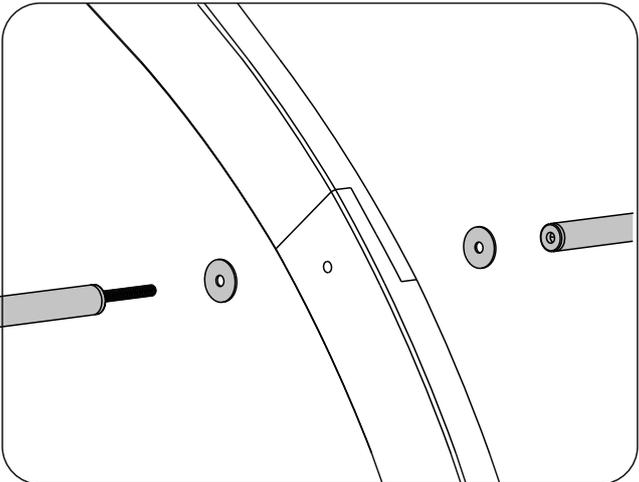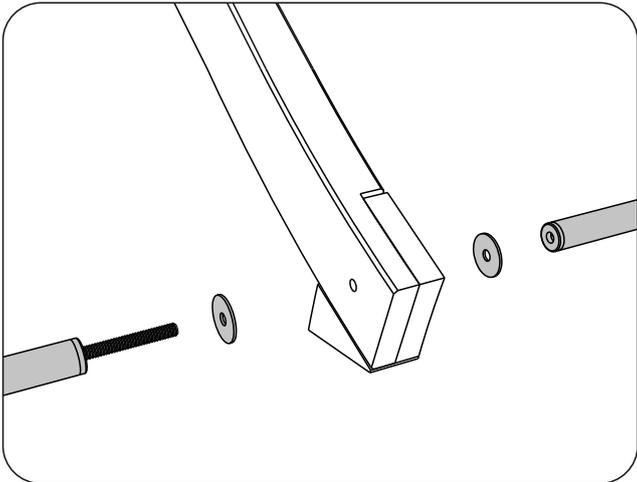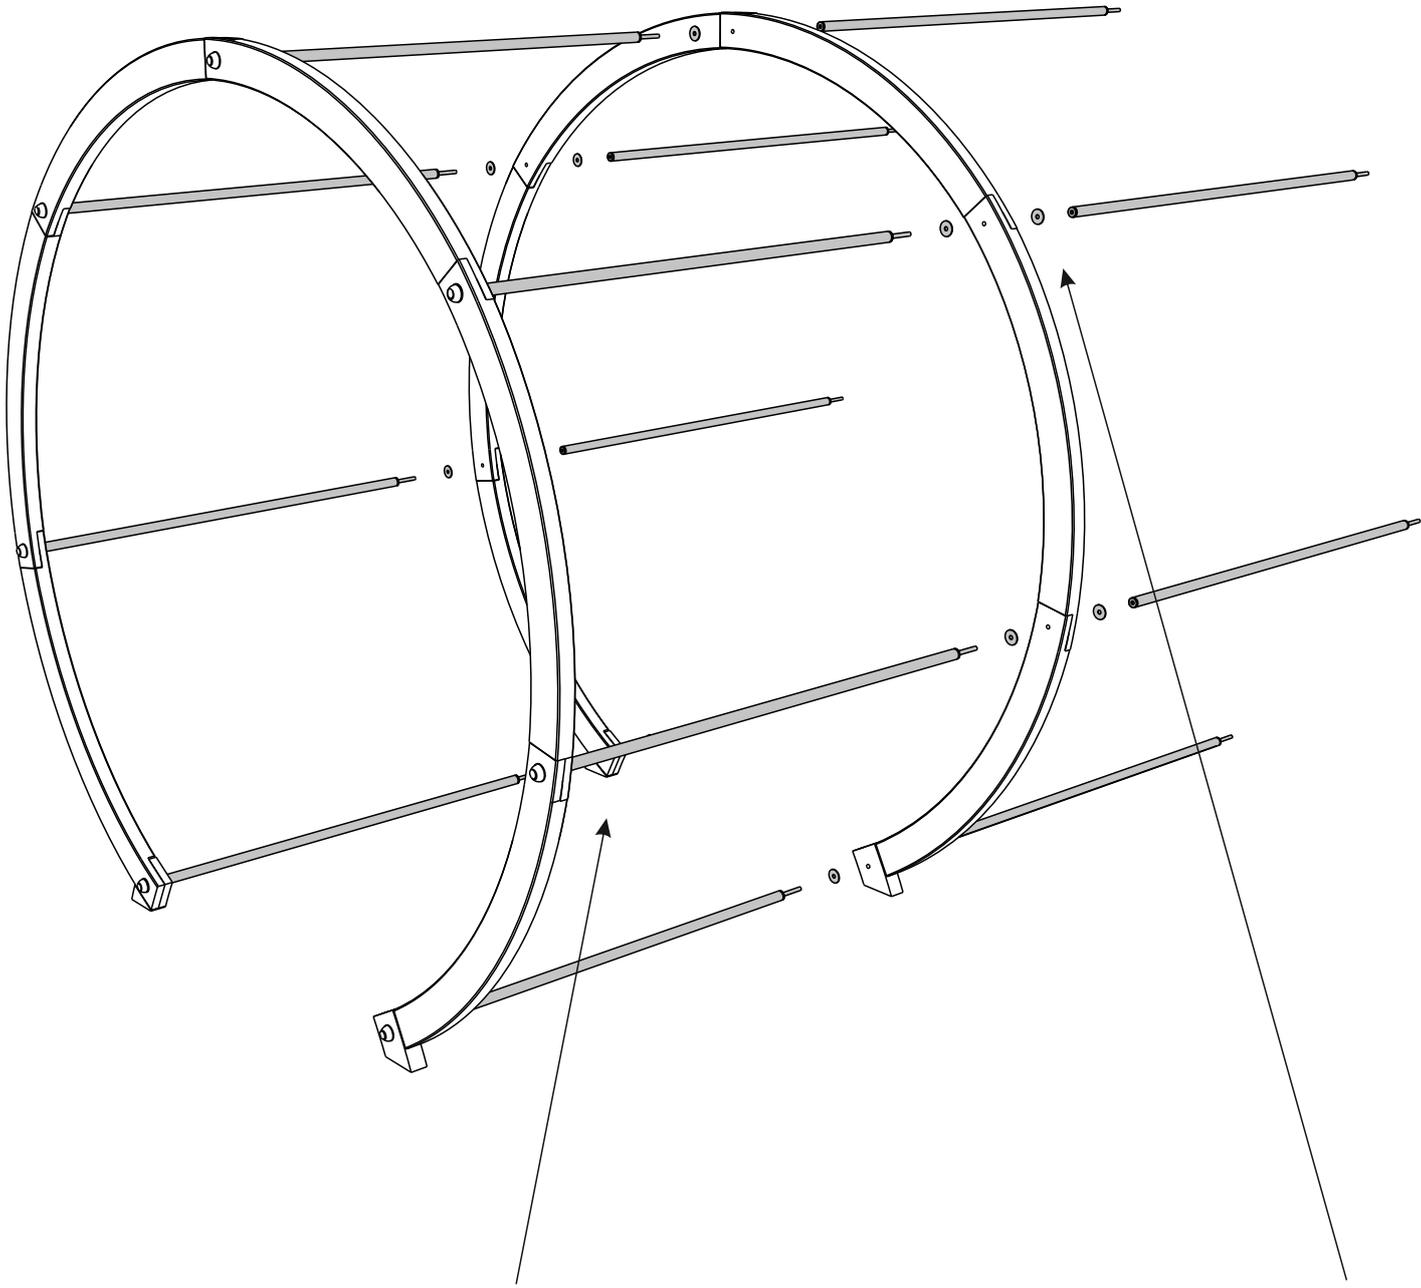

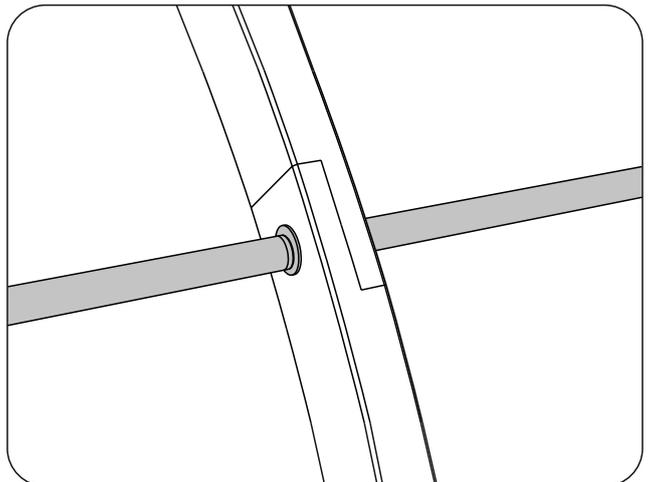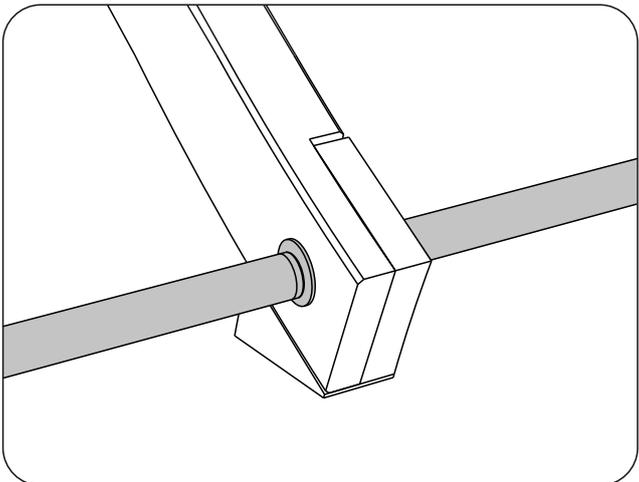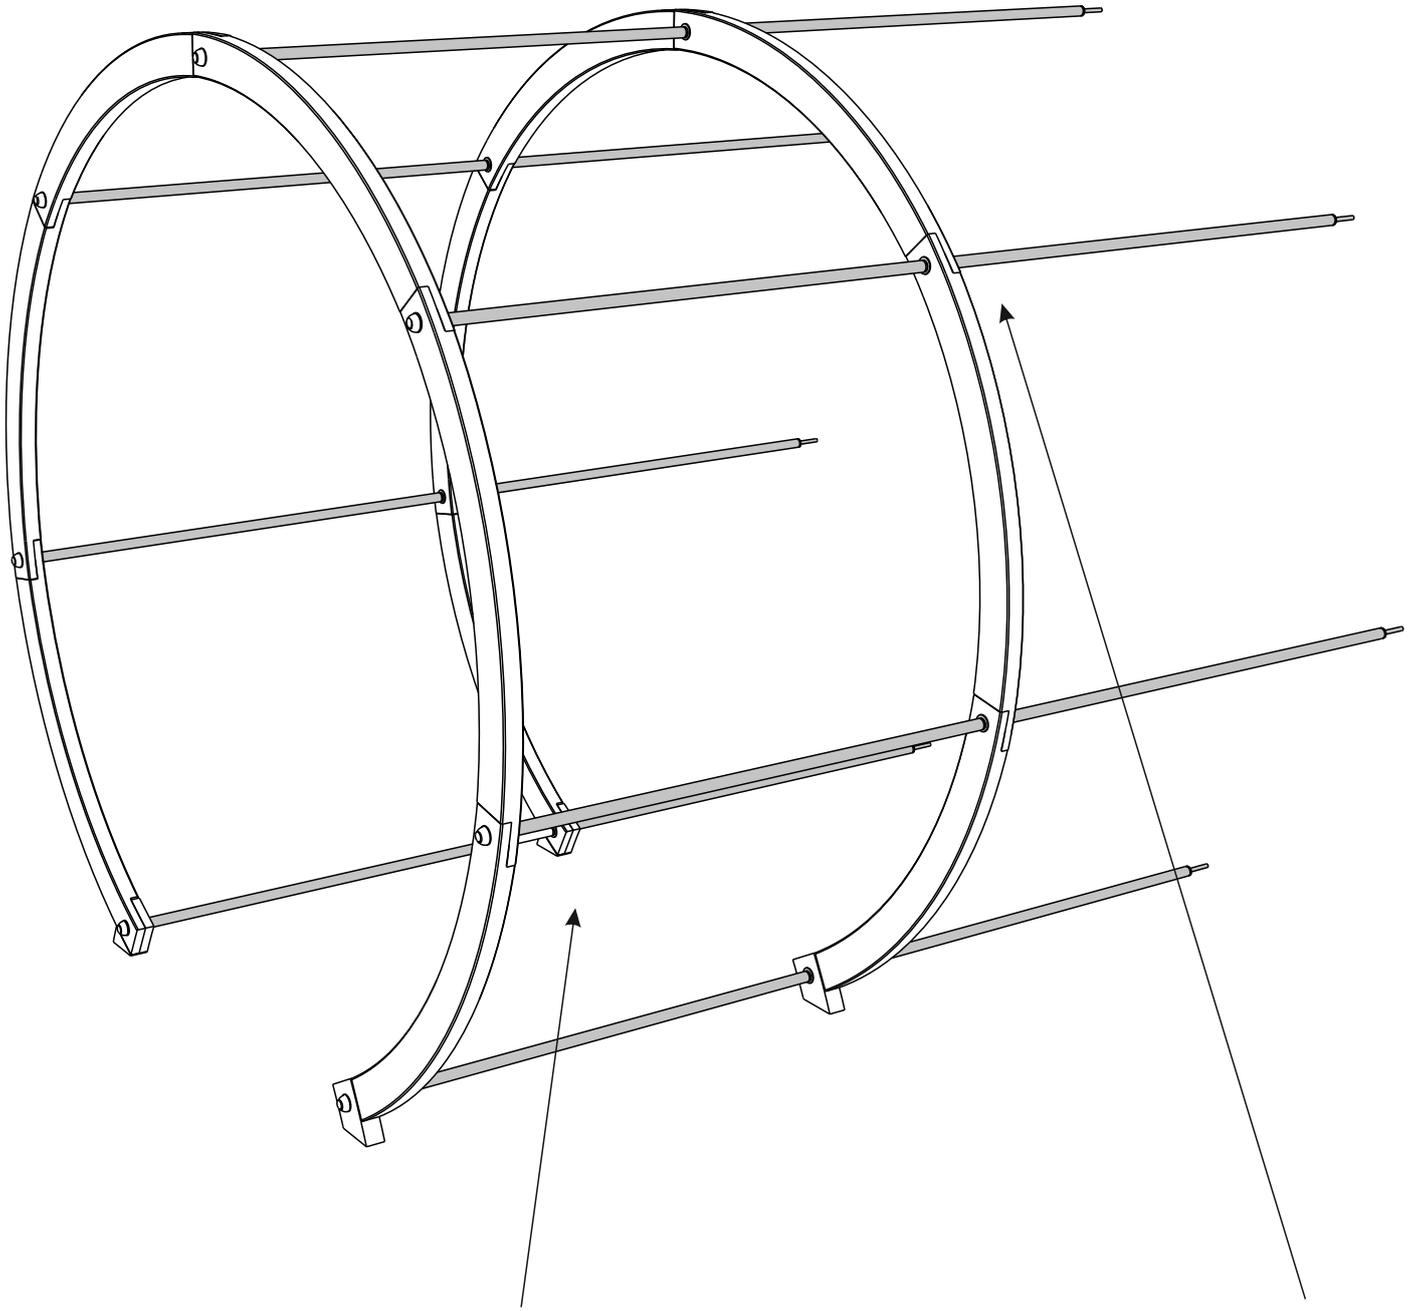

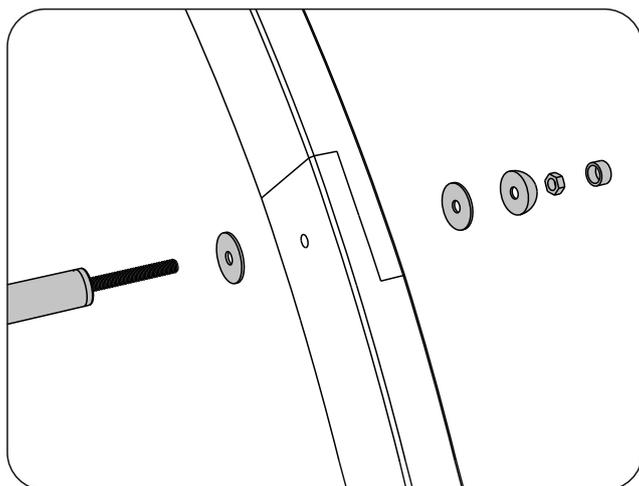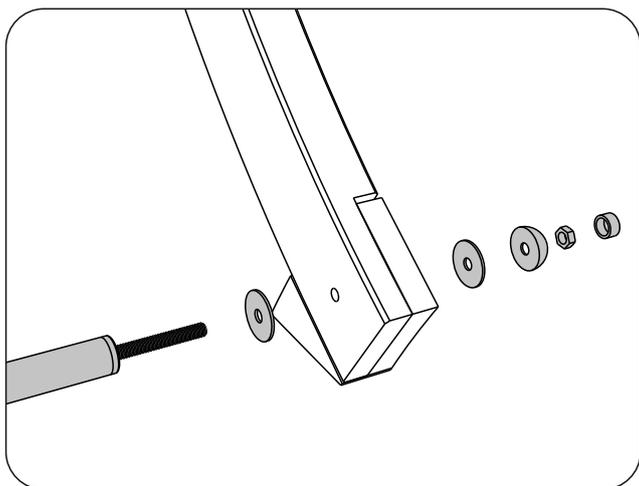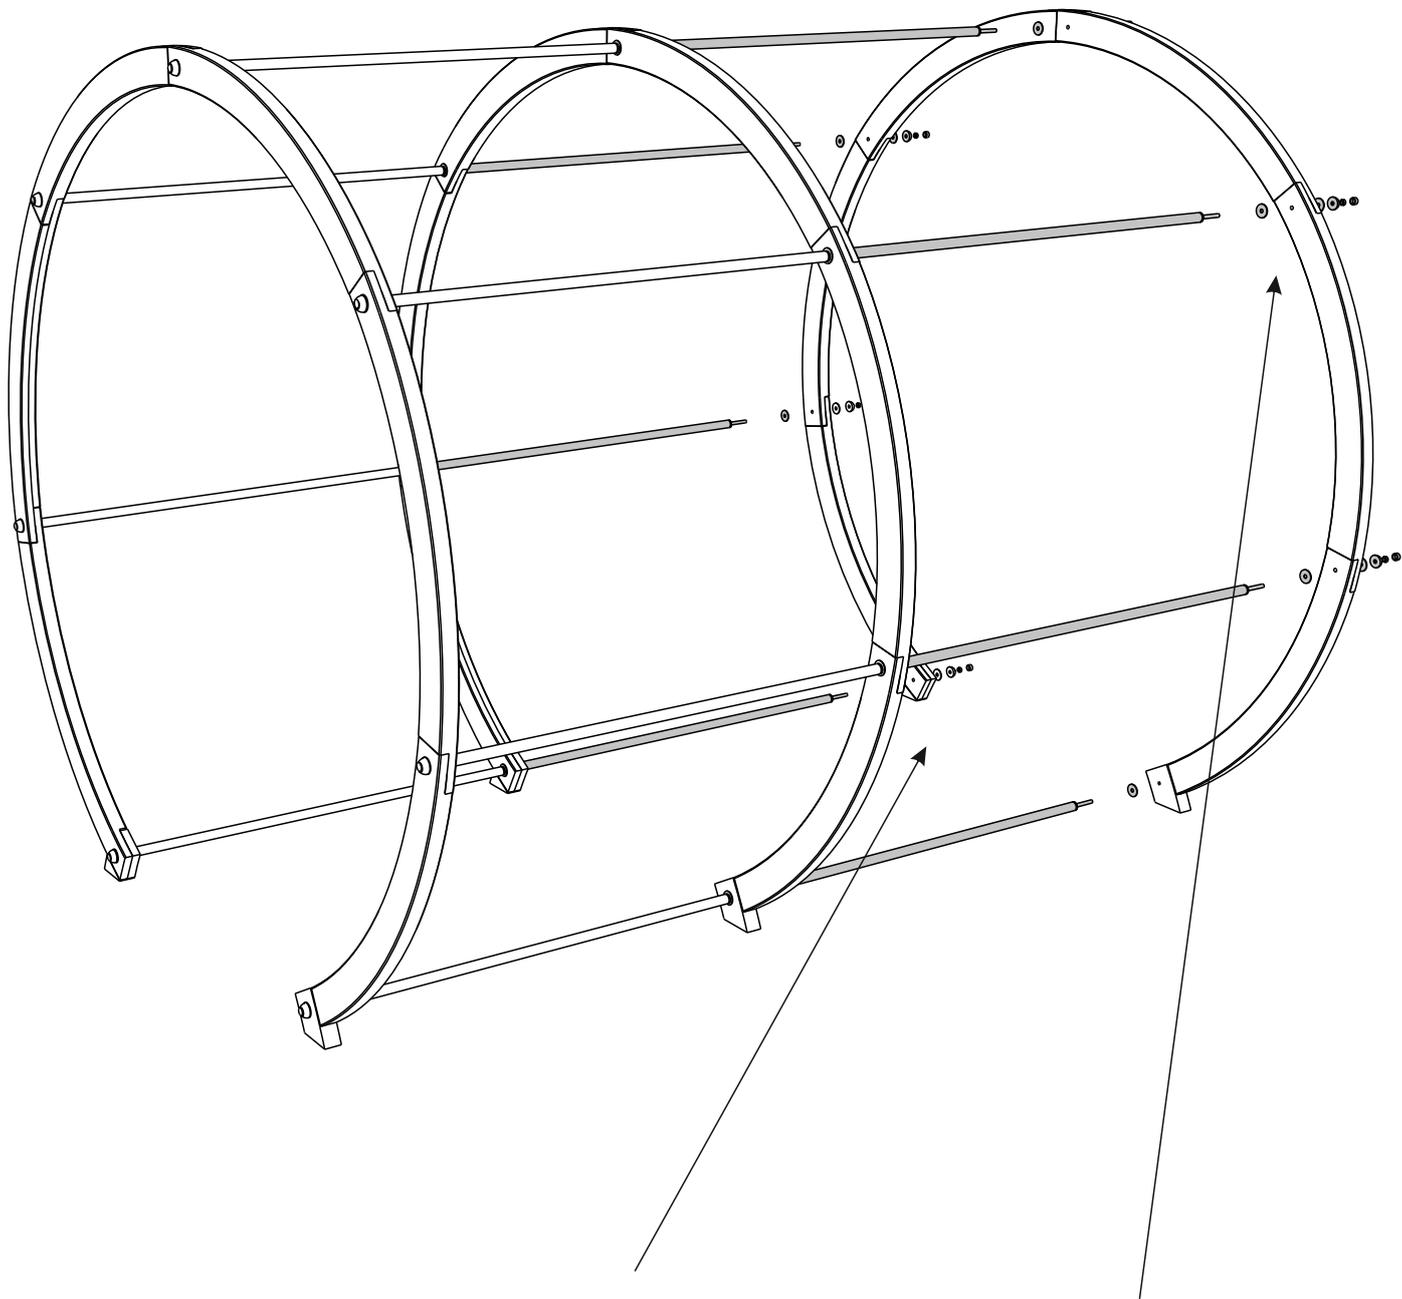

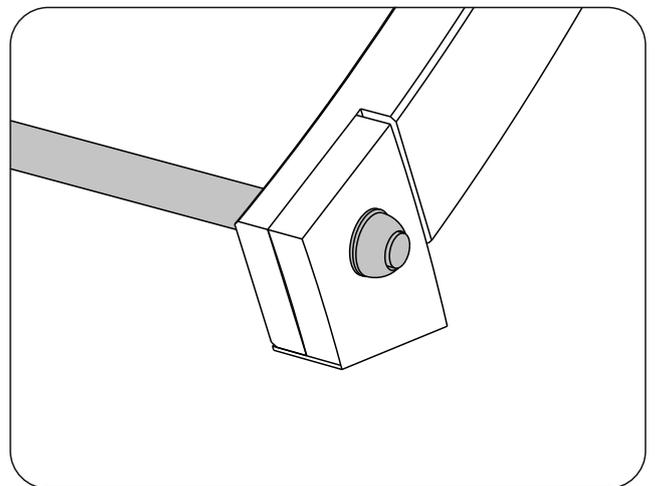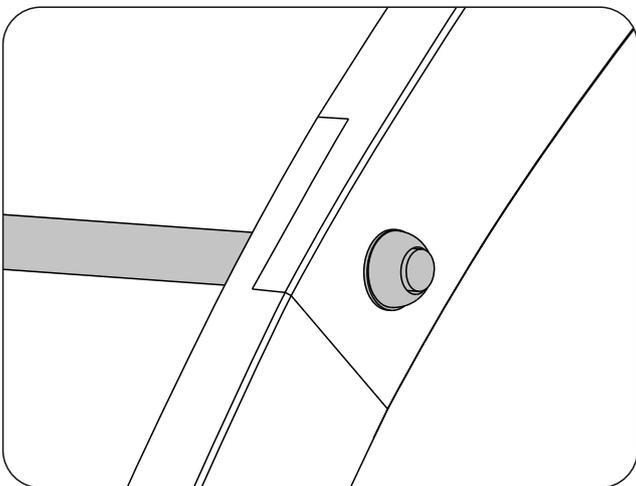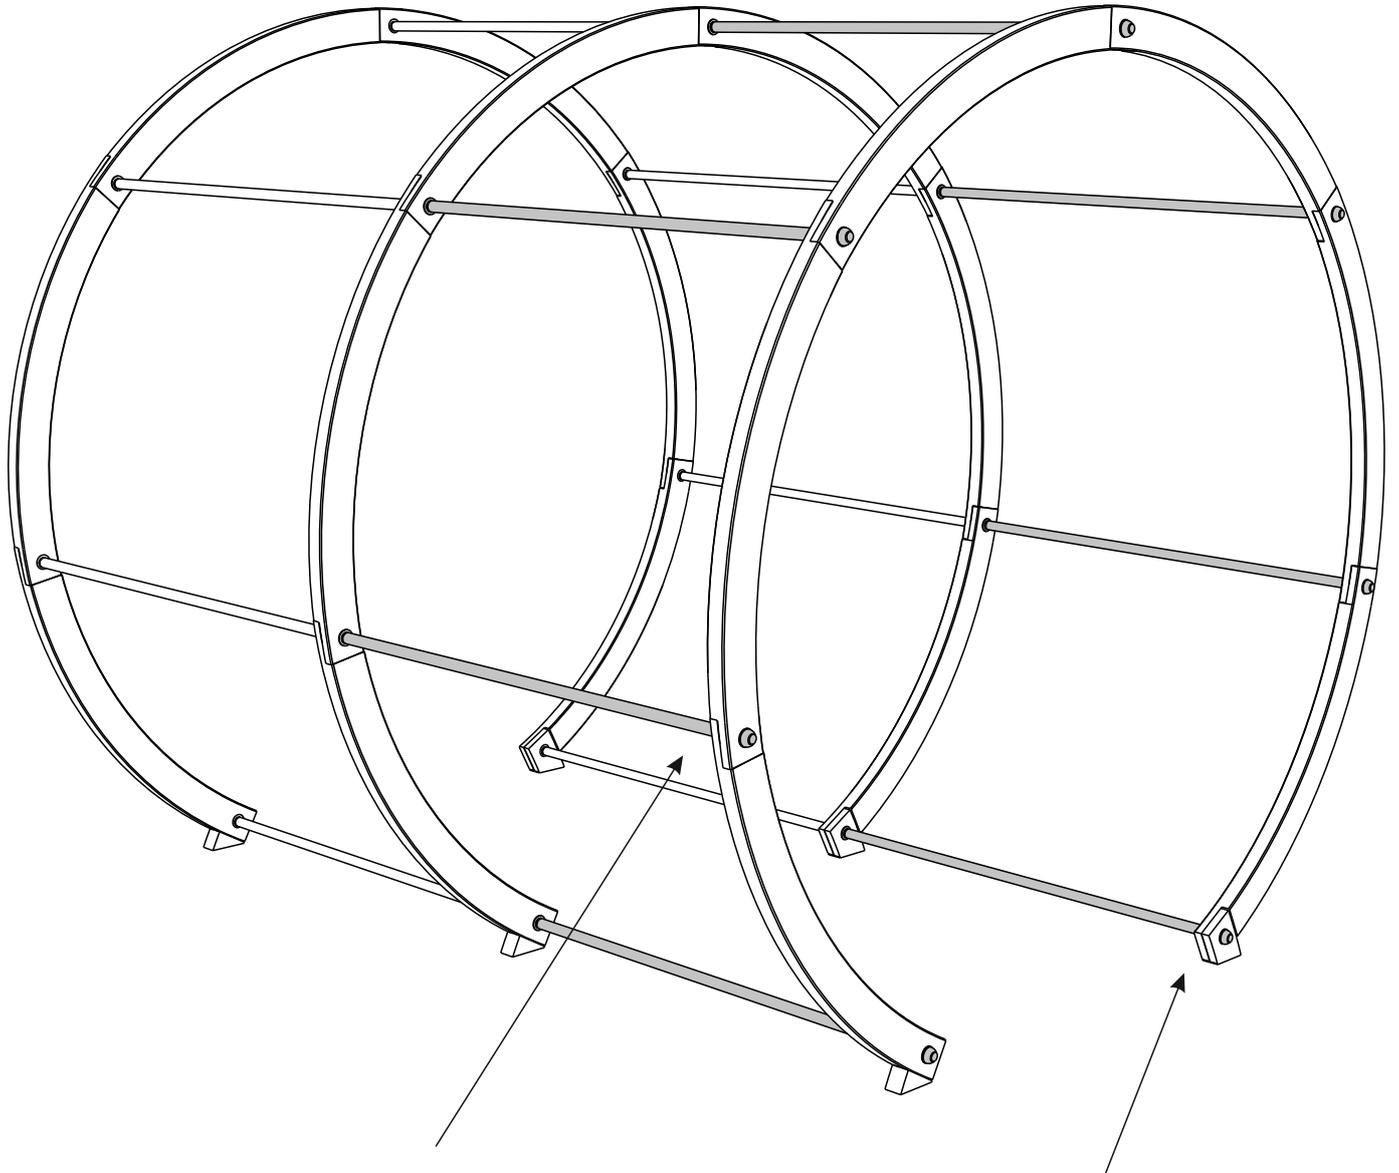

AFTERCARE

To ensure longevity of your structure it is recommended that it is treated with a wood preservative on a yearly basis.

Your item is ready!